



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //  
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


# FURO A22

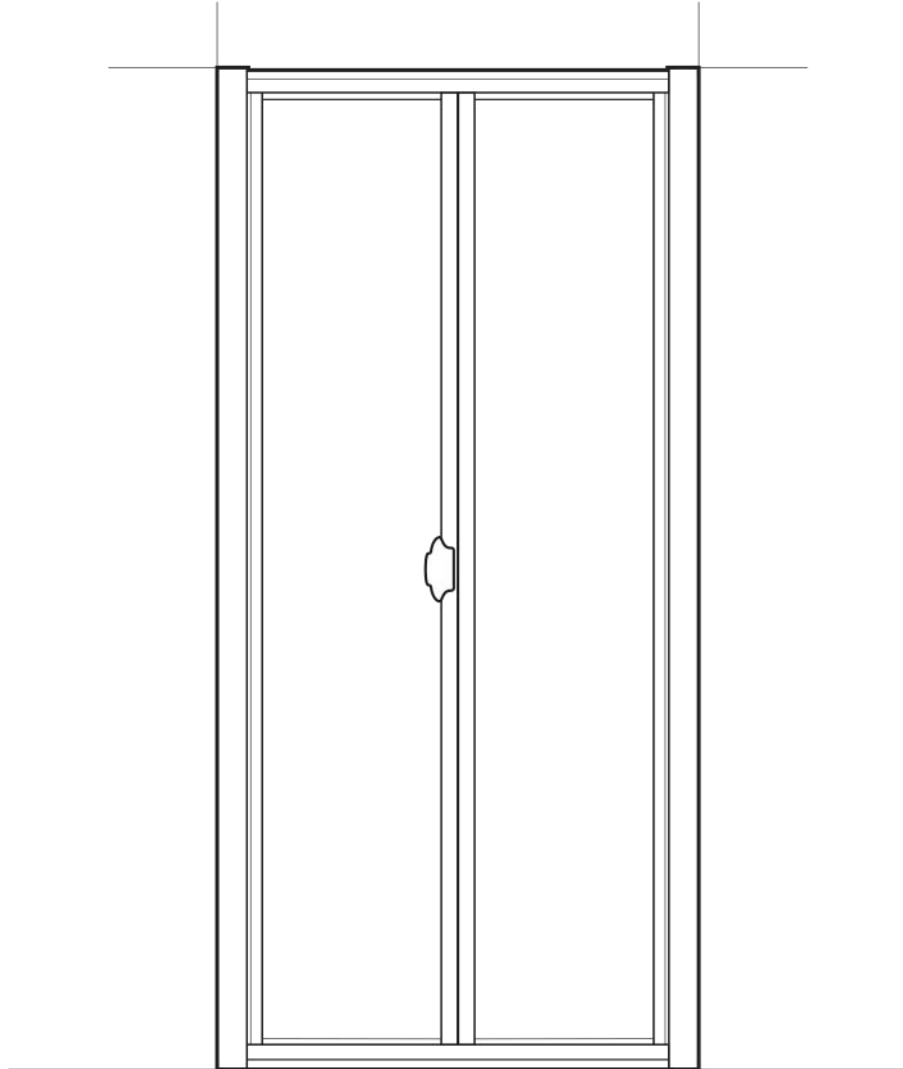


**A**

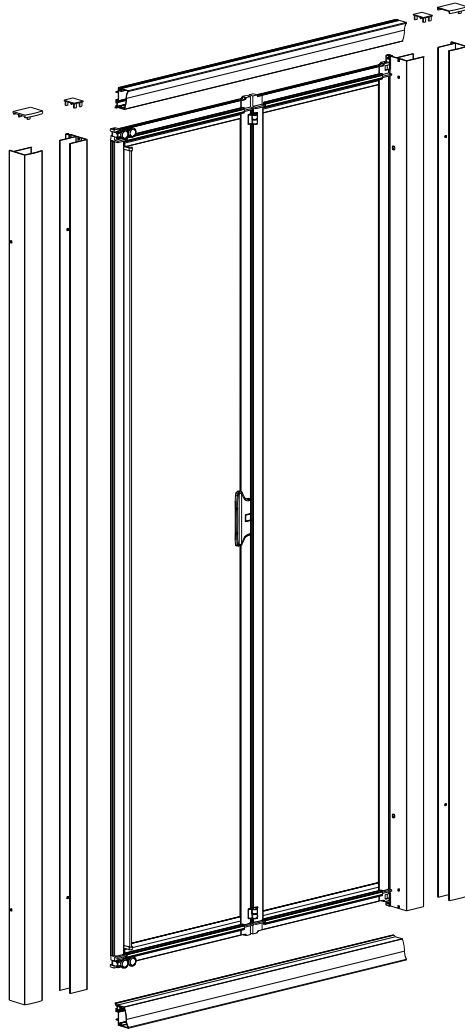

**B**

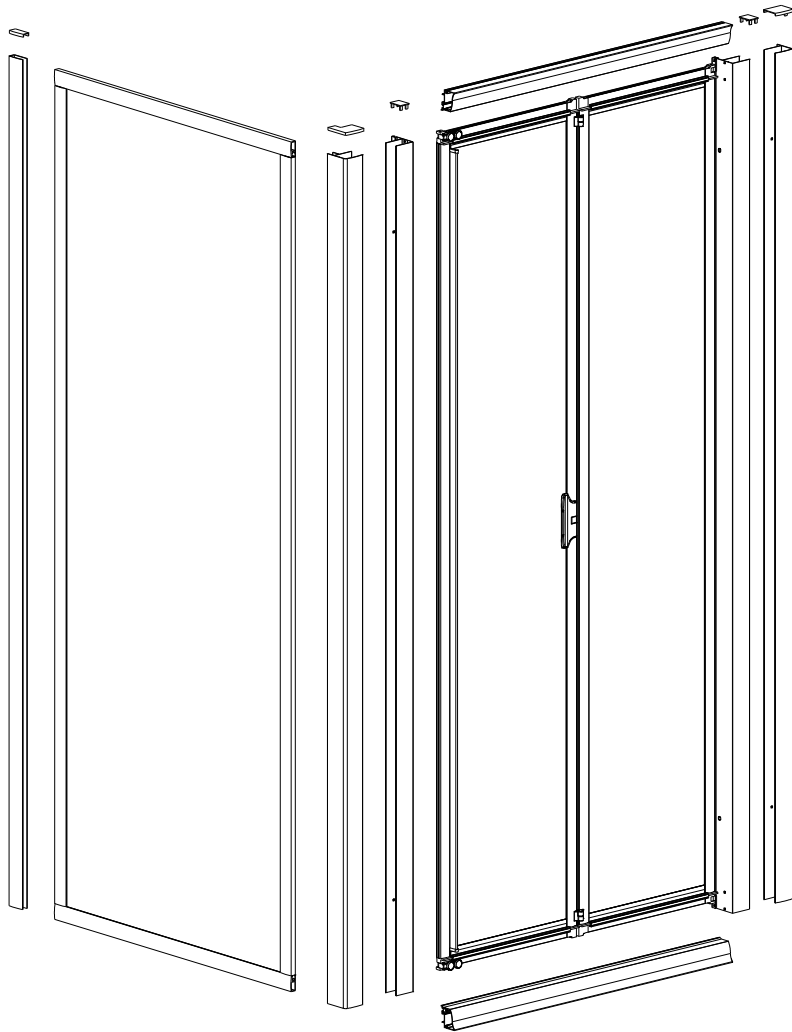

M-01  1

M-03  2

M-05  1


M-07  2


M-09   $\phi 6$  4

M-11  3,5x16 4

M-13  4

# A

M-02  1


M-04  2

M-06  1


M-08  DIN 7981 4,2x32 4

M-10  DIN 7981 4,2x22 8

M-12  8

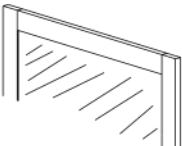M-21  1

M-23  1

M-25  1

M-27  3,5x16 4

# B


M-22  1

M-24  1


M-26  2




# A

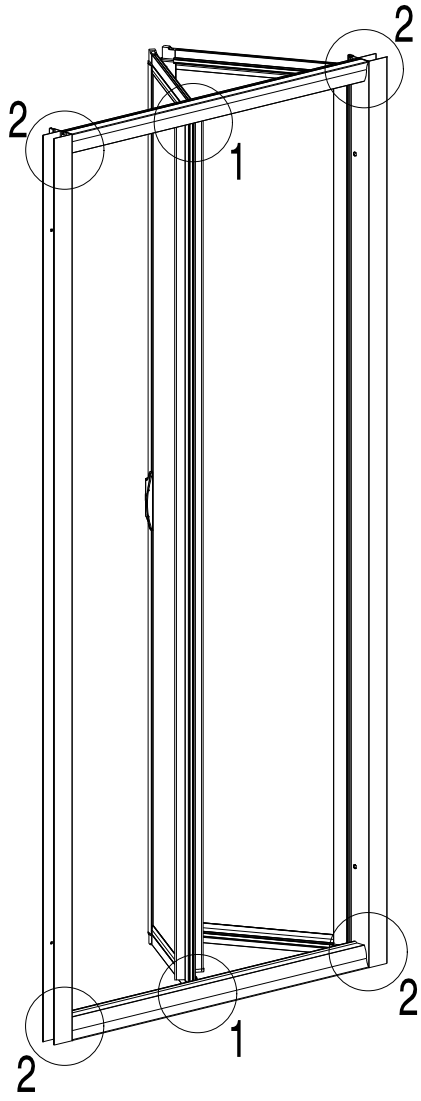


# B

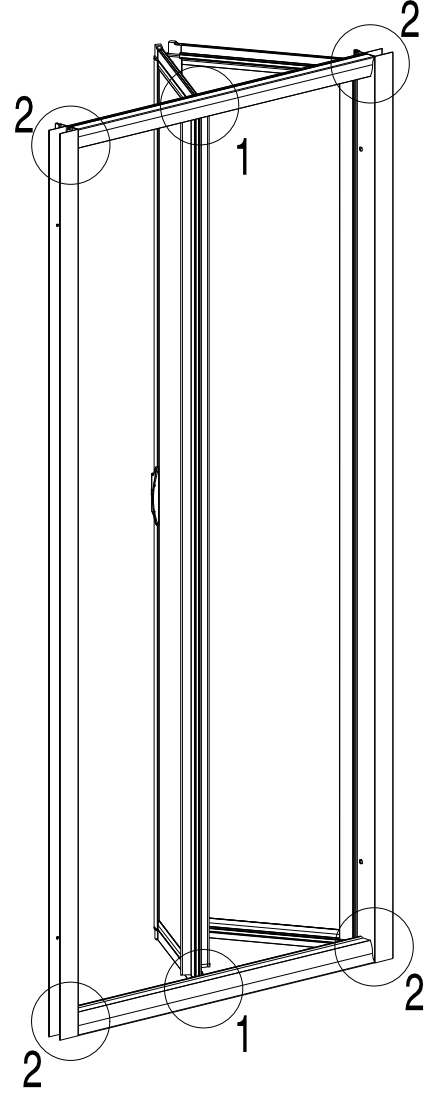


## 1

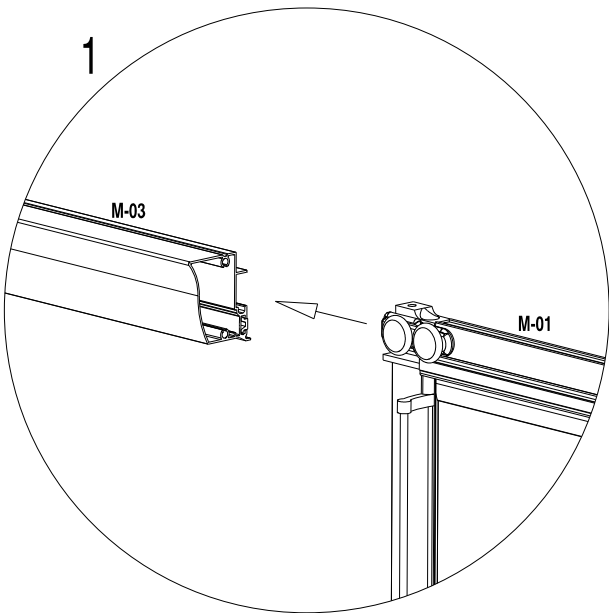


## 2


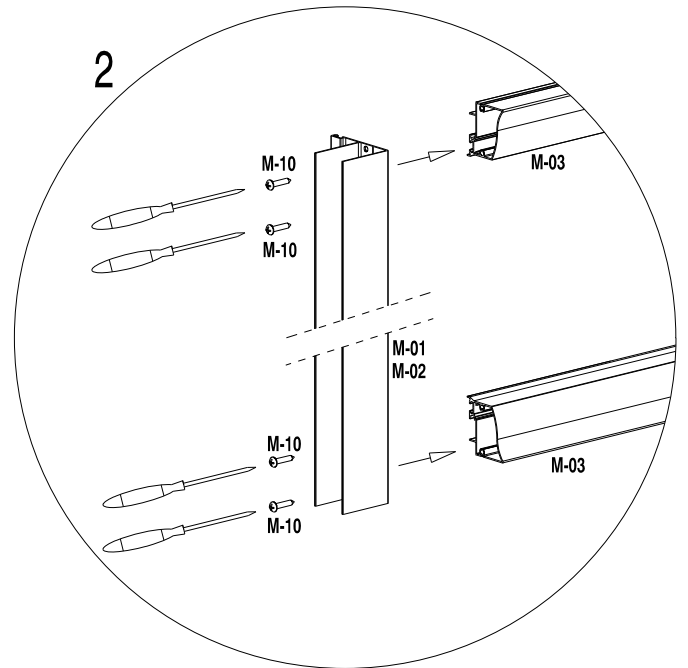


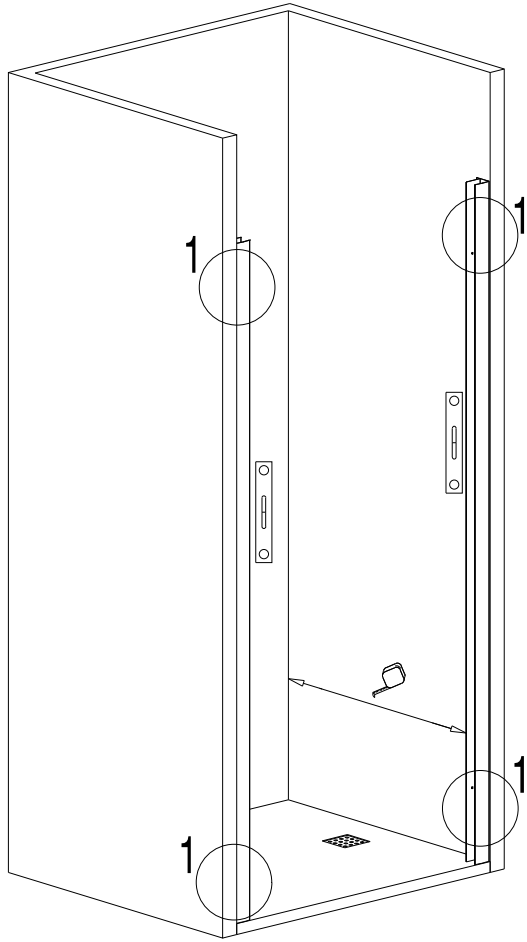**A**


1a

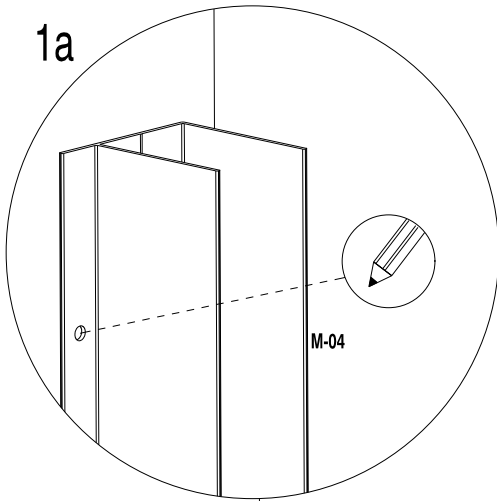


1b






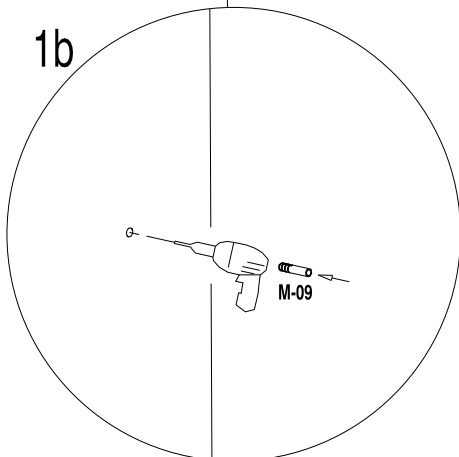
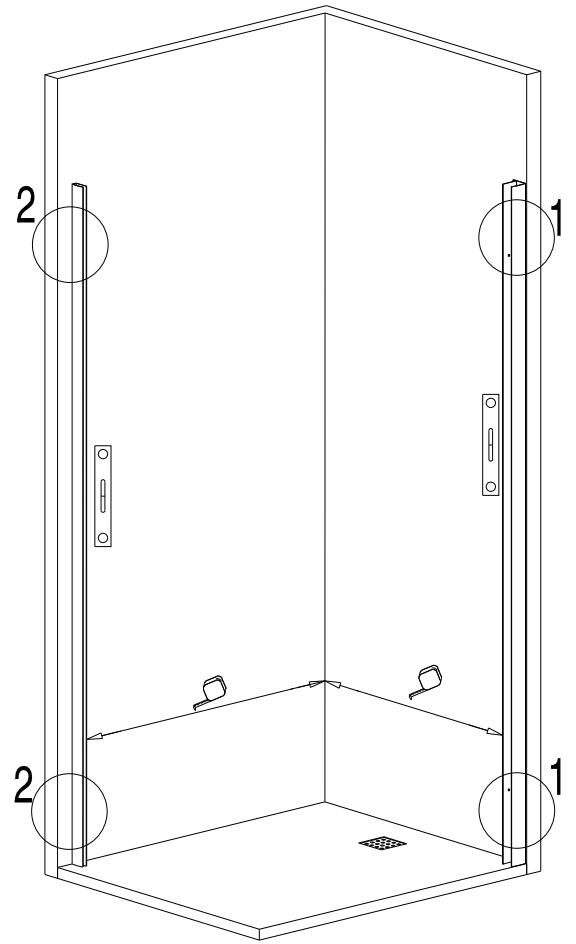
**B**

1



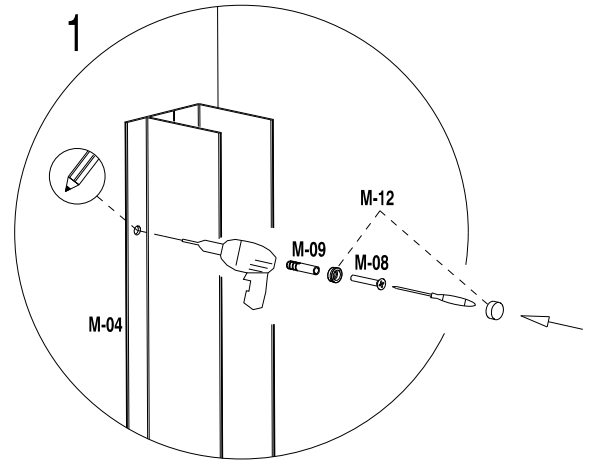






2

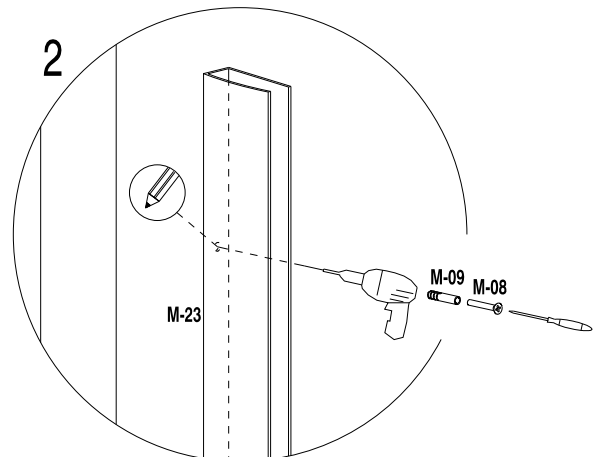

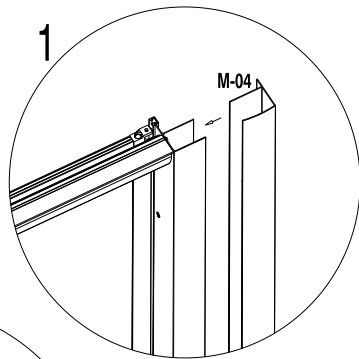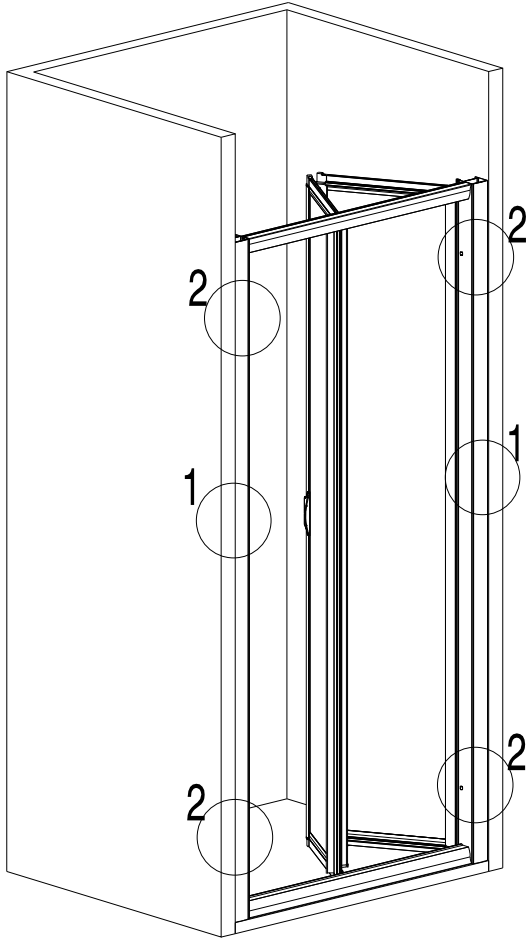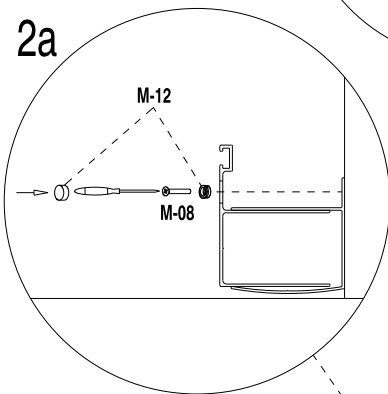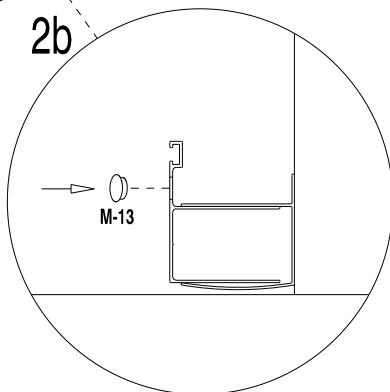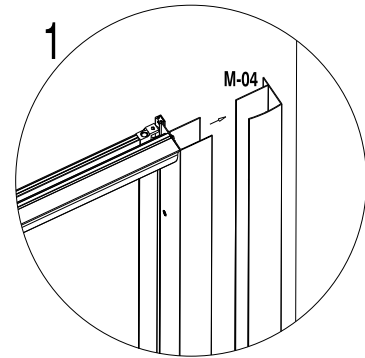
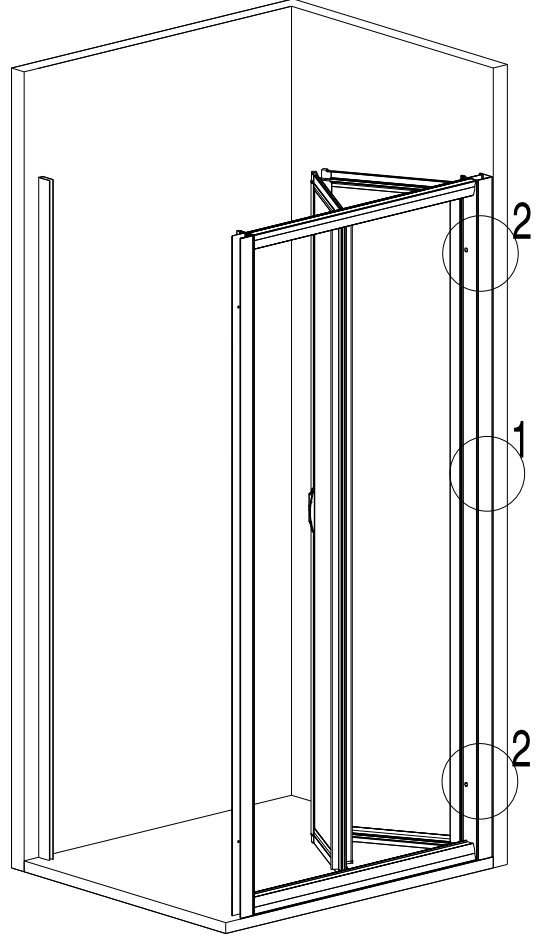
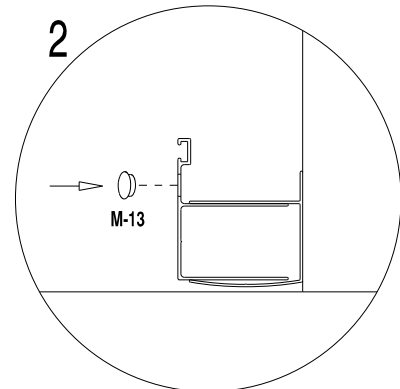
**A****2a****2b****B****2**

# B

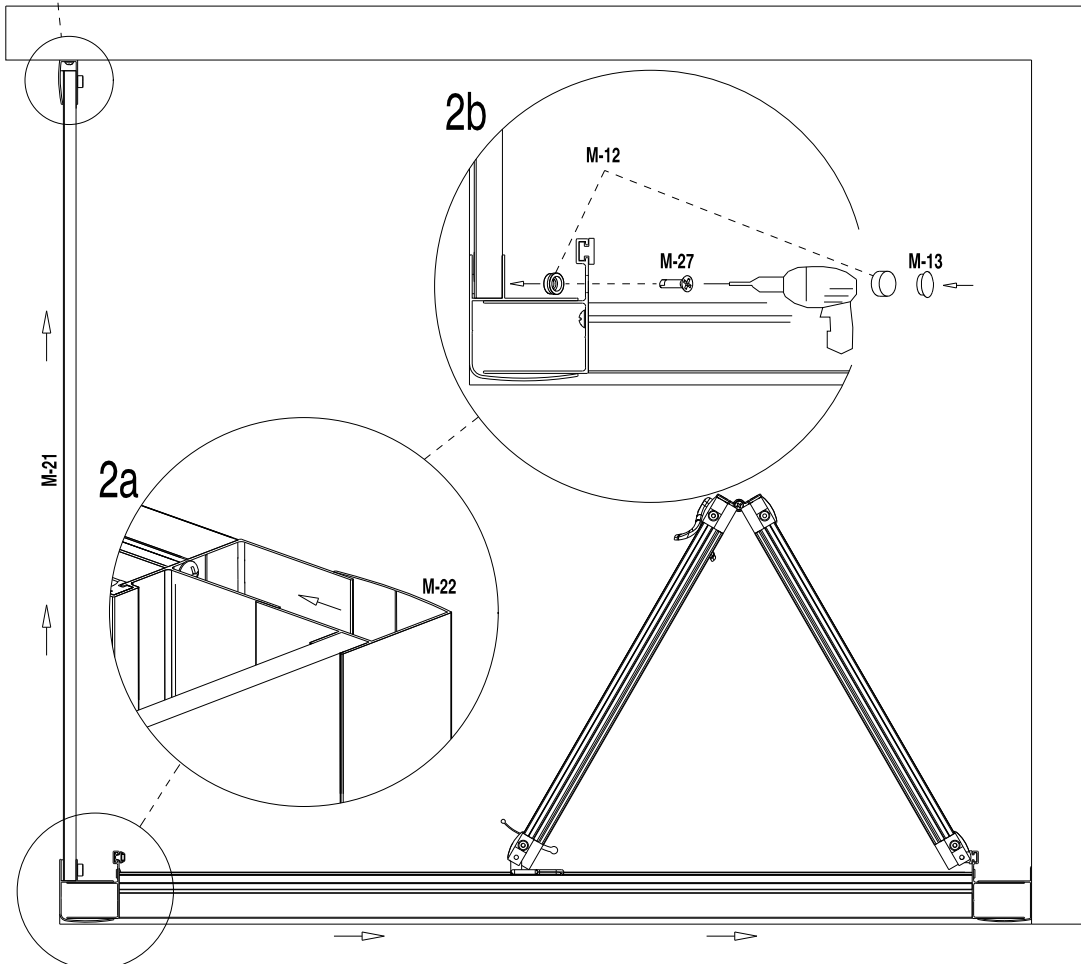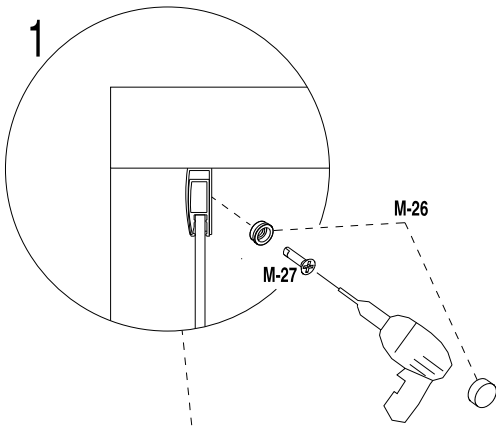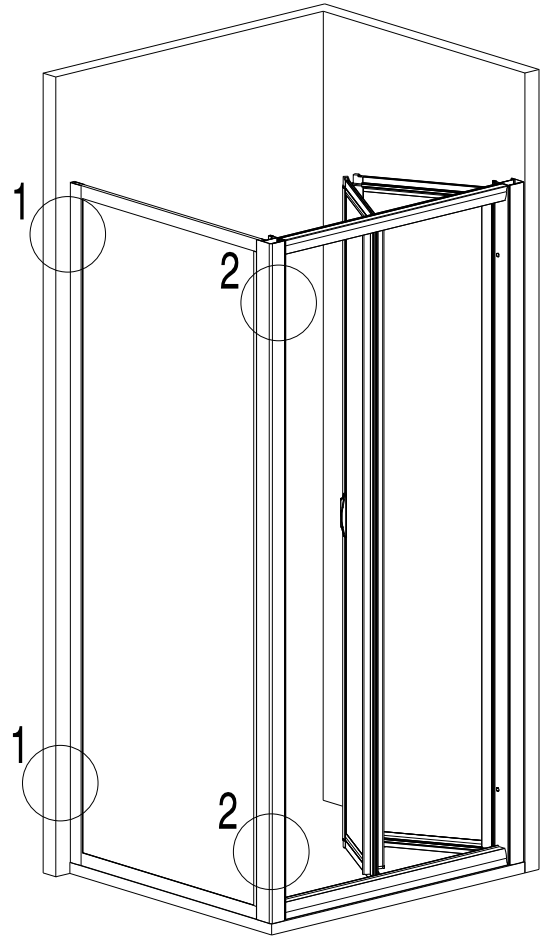


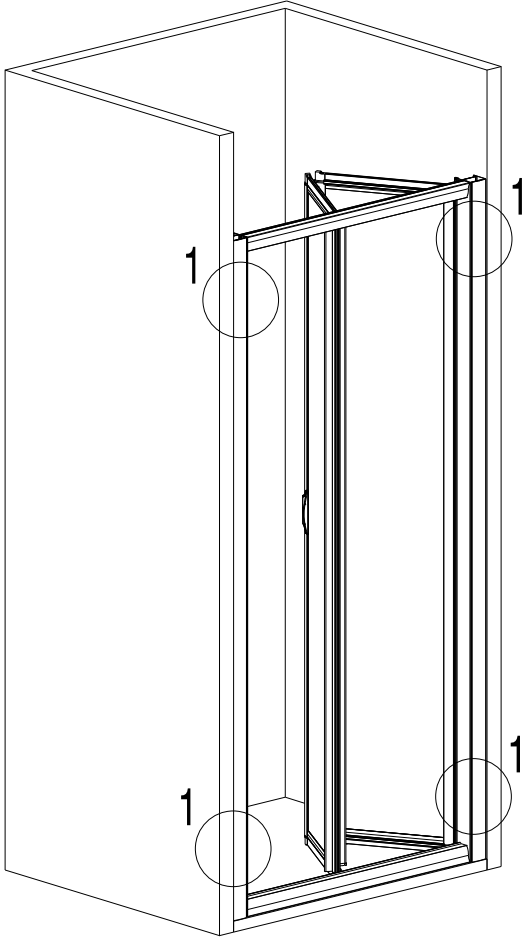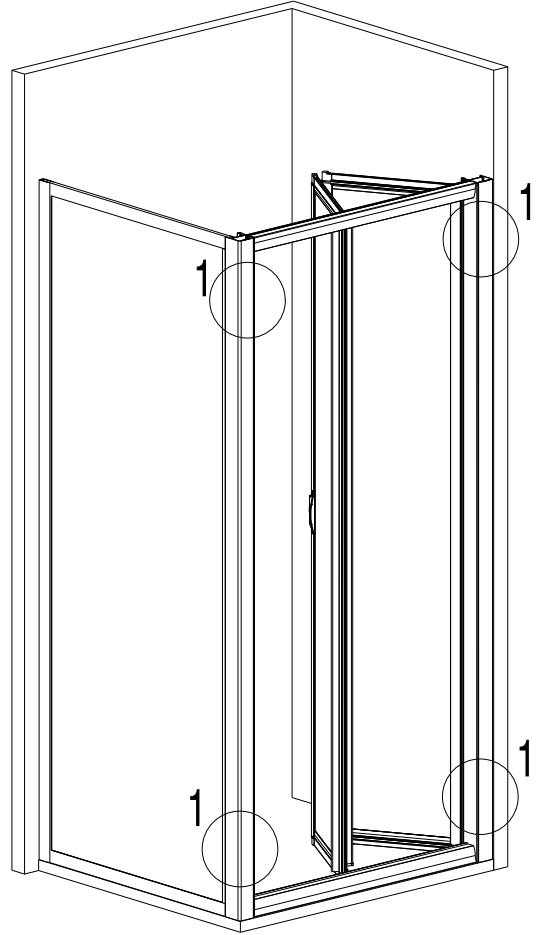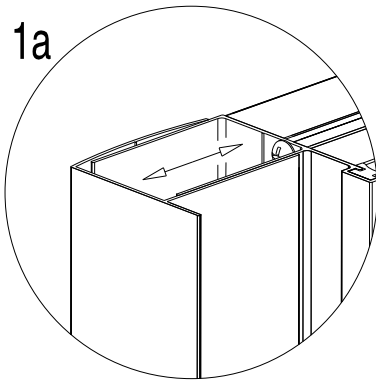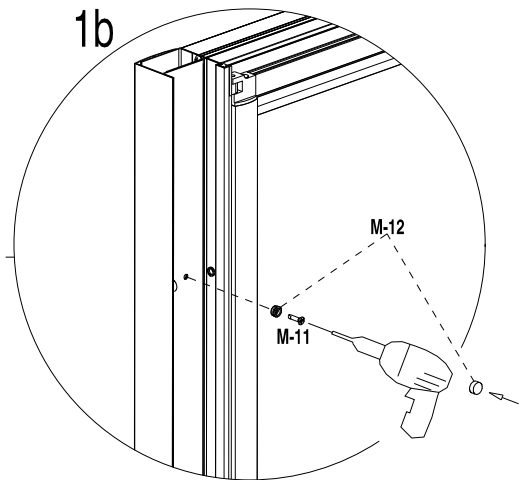**A****B****1a****1b**

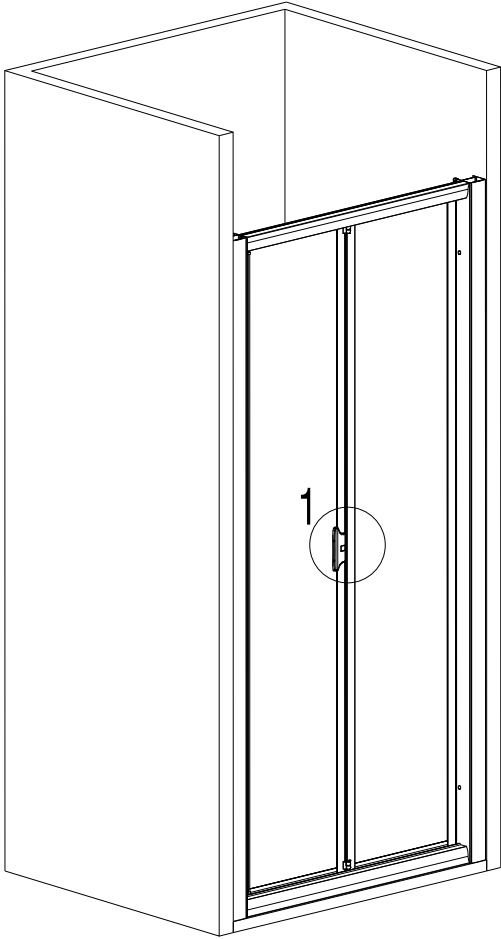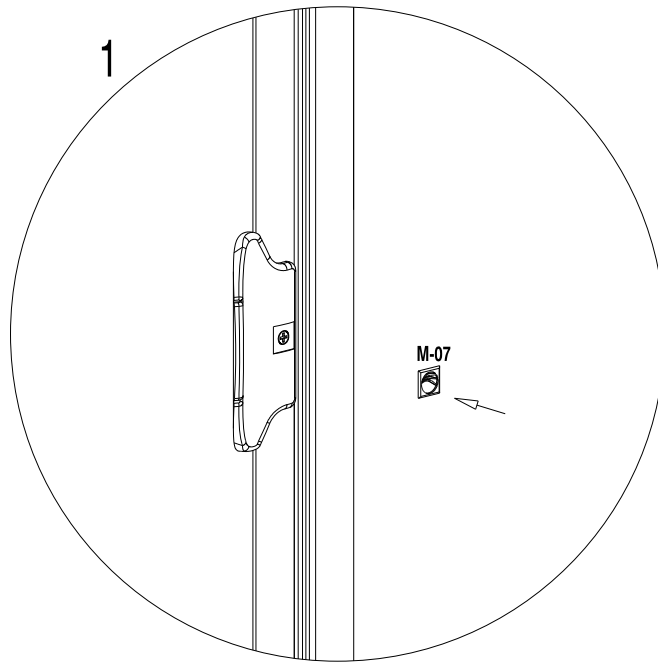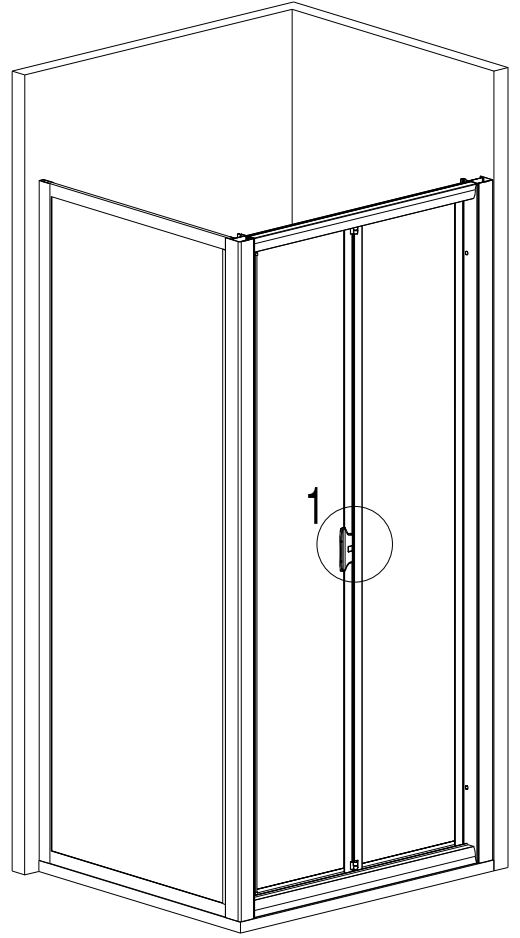


**A****B**


# A

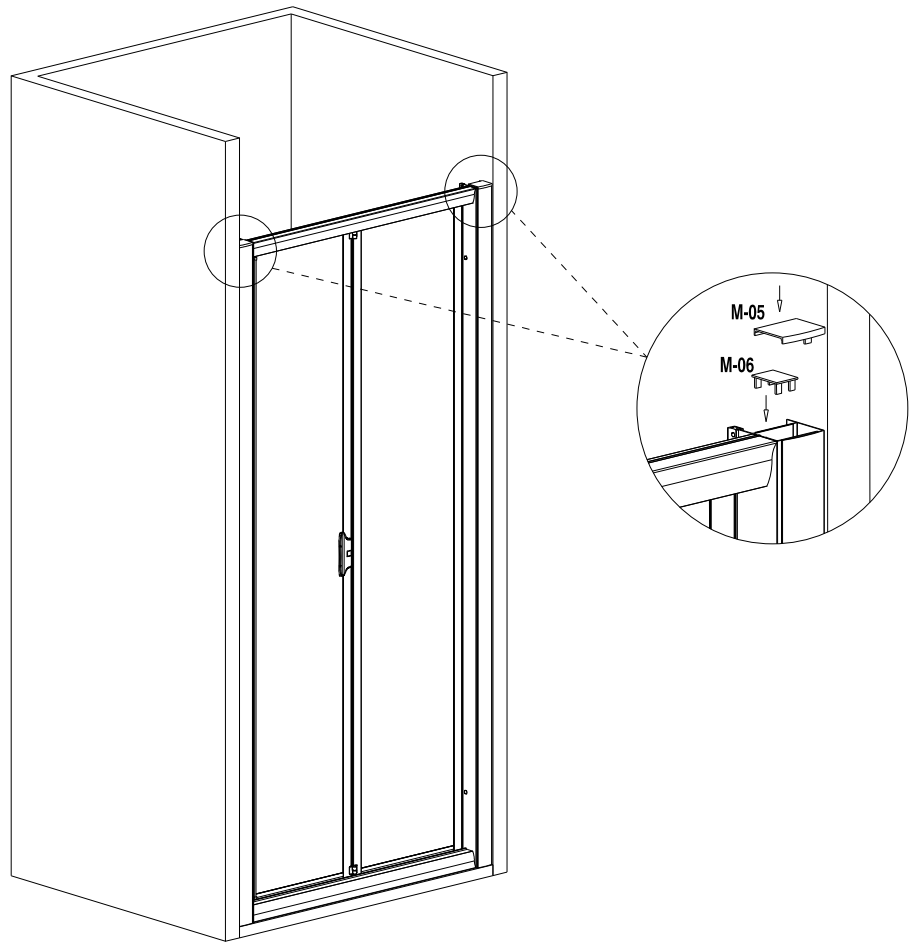





# B

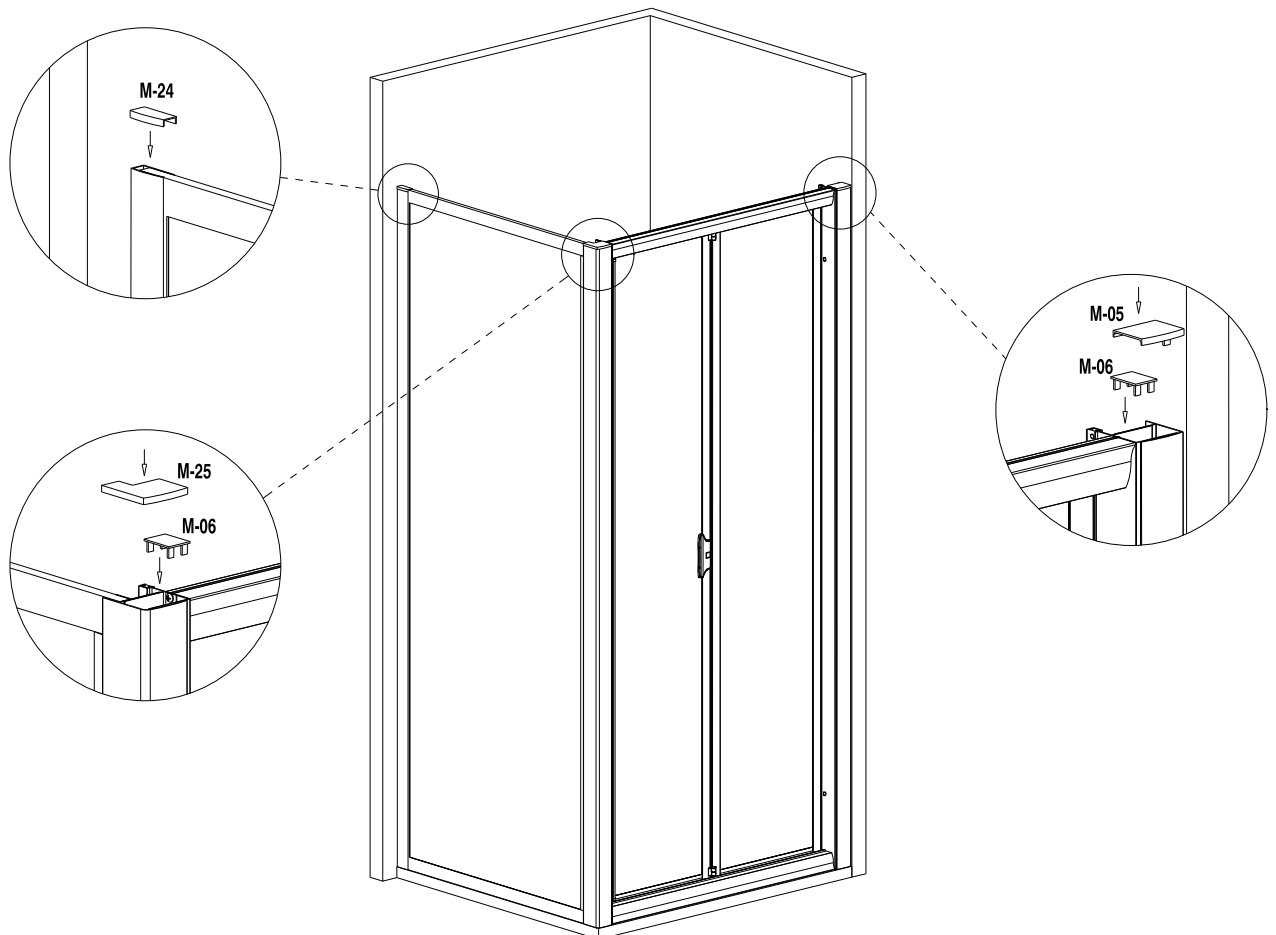

# A

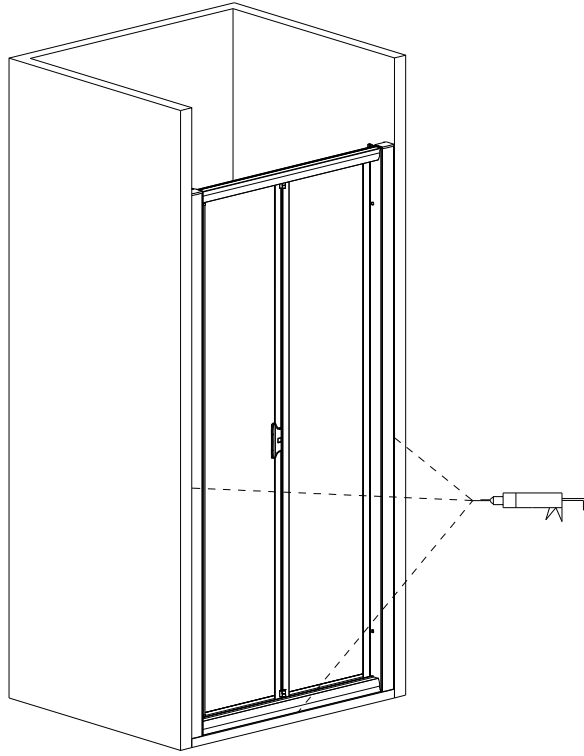

# B

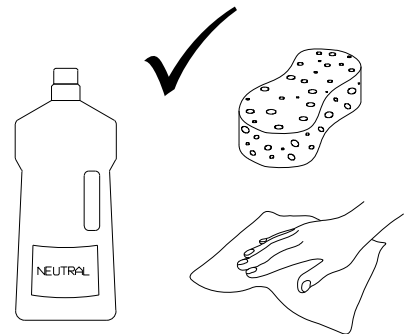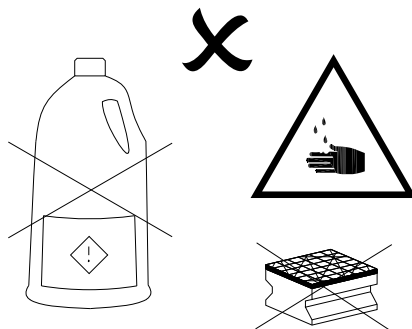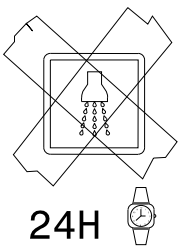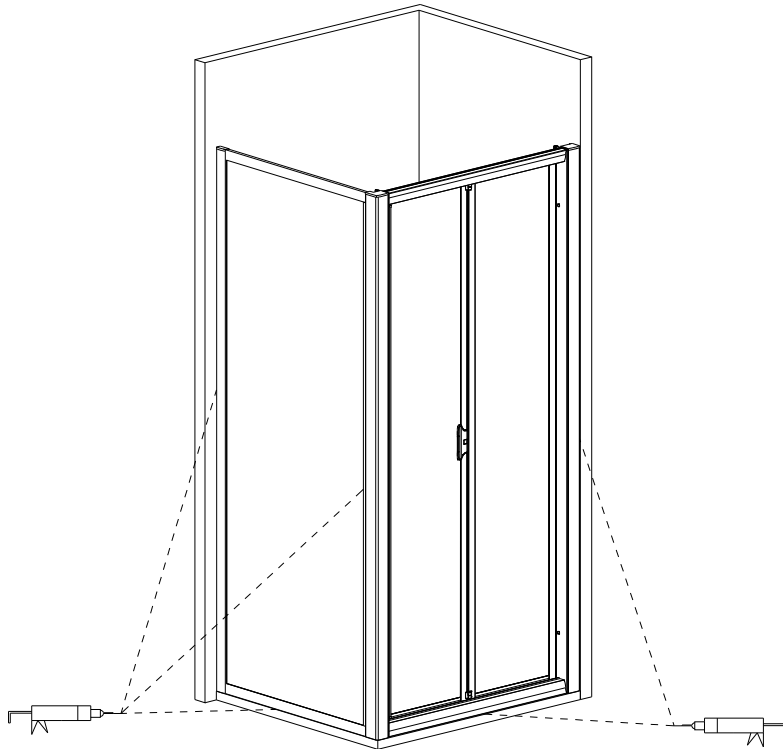



EUROPEAN SYSTEMS SERVICES  
[contact@expertbath.com](mailto:contact@expertbath.com)



13

UNE-EN 14428

