

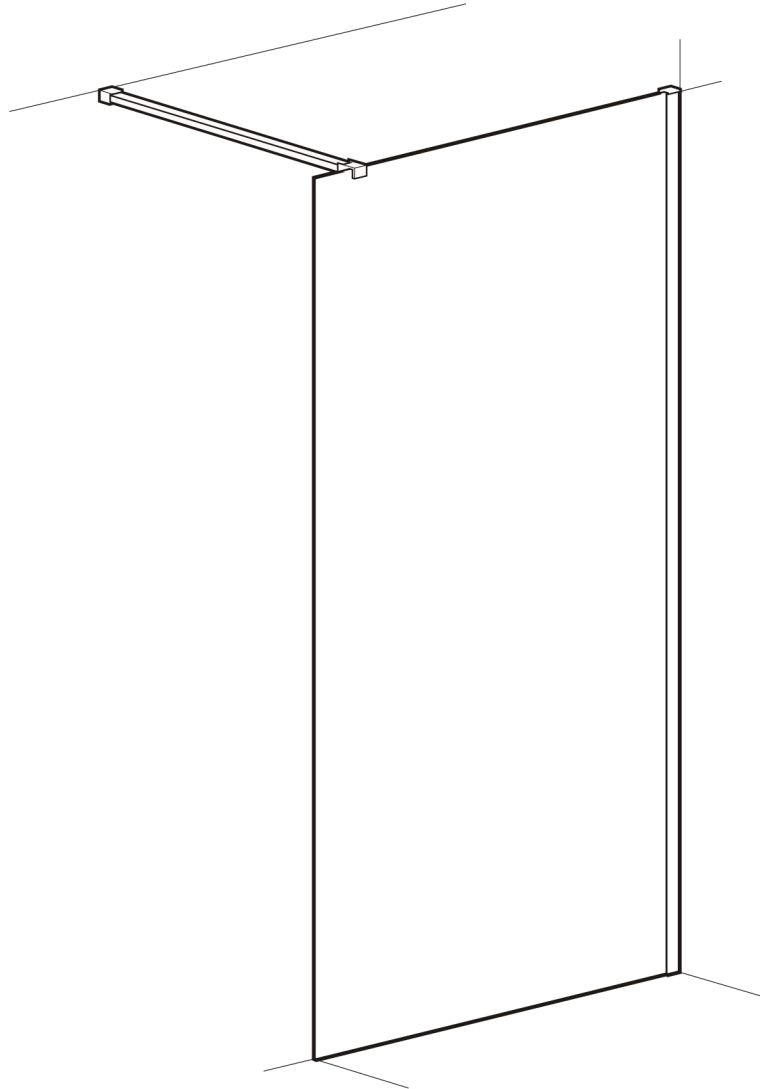



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO P23 Side 1

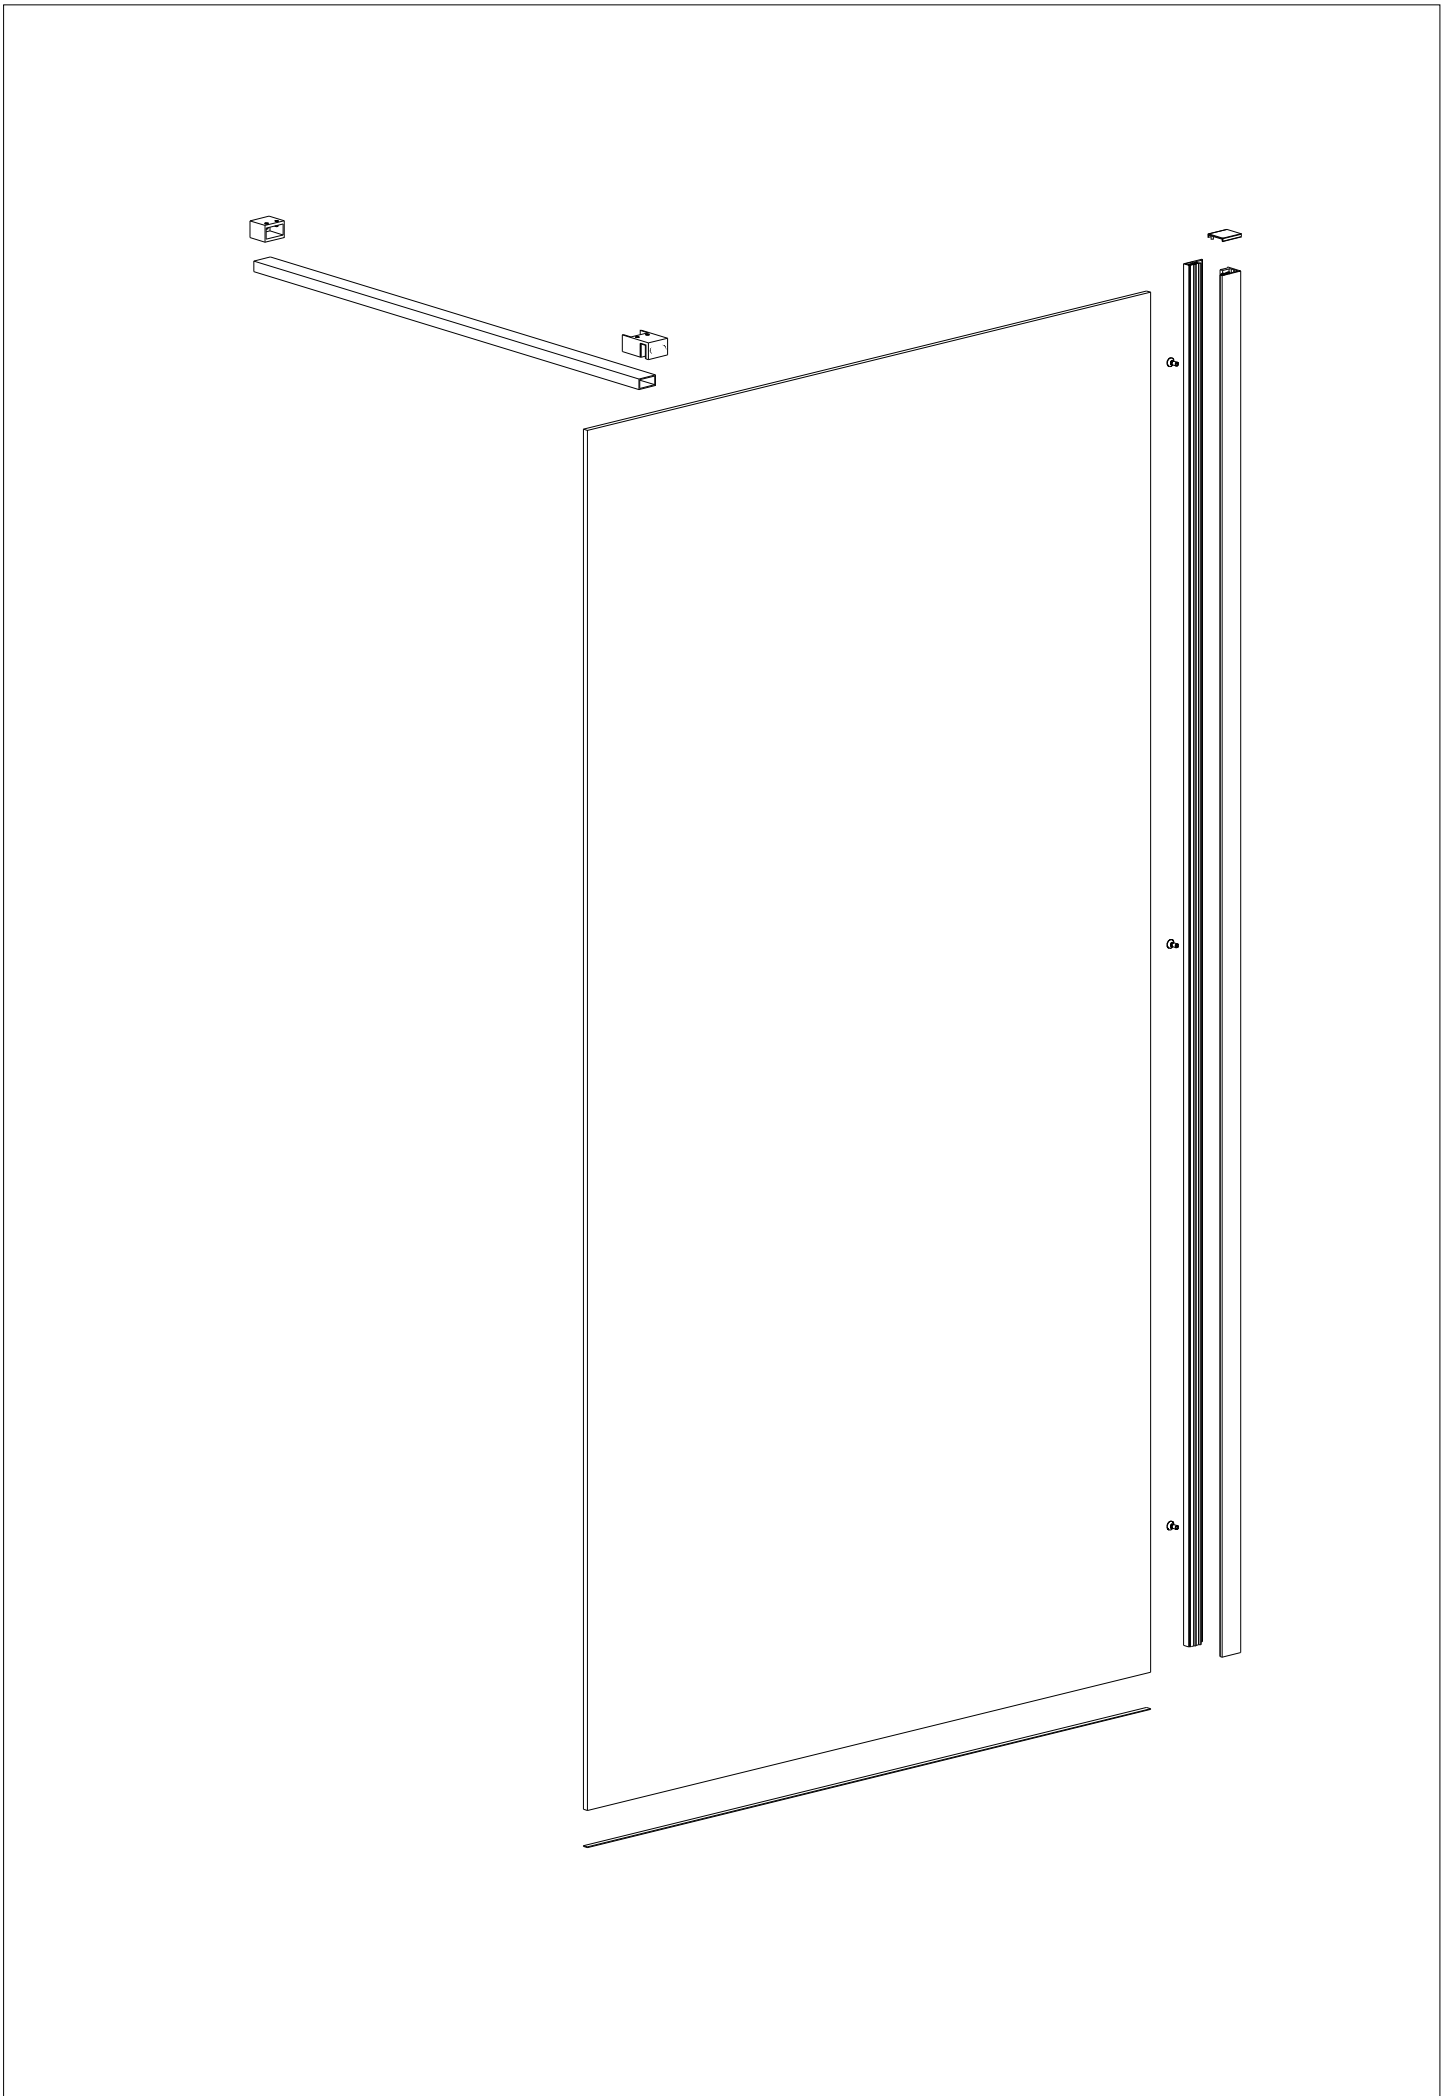




M-01  **1**

M-03  **1**



M-05  **1**


M-07  $\varnothing 6$ **5**



M-04  **3**


M-06  **1**






M-08  **5**

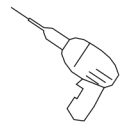


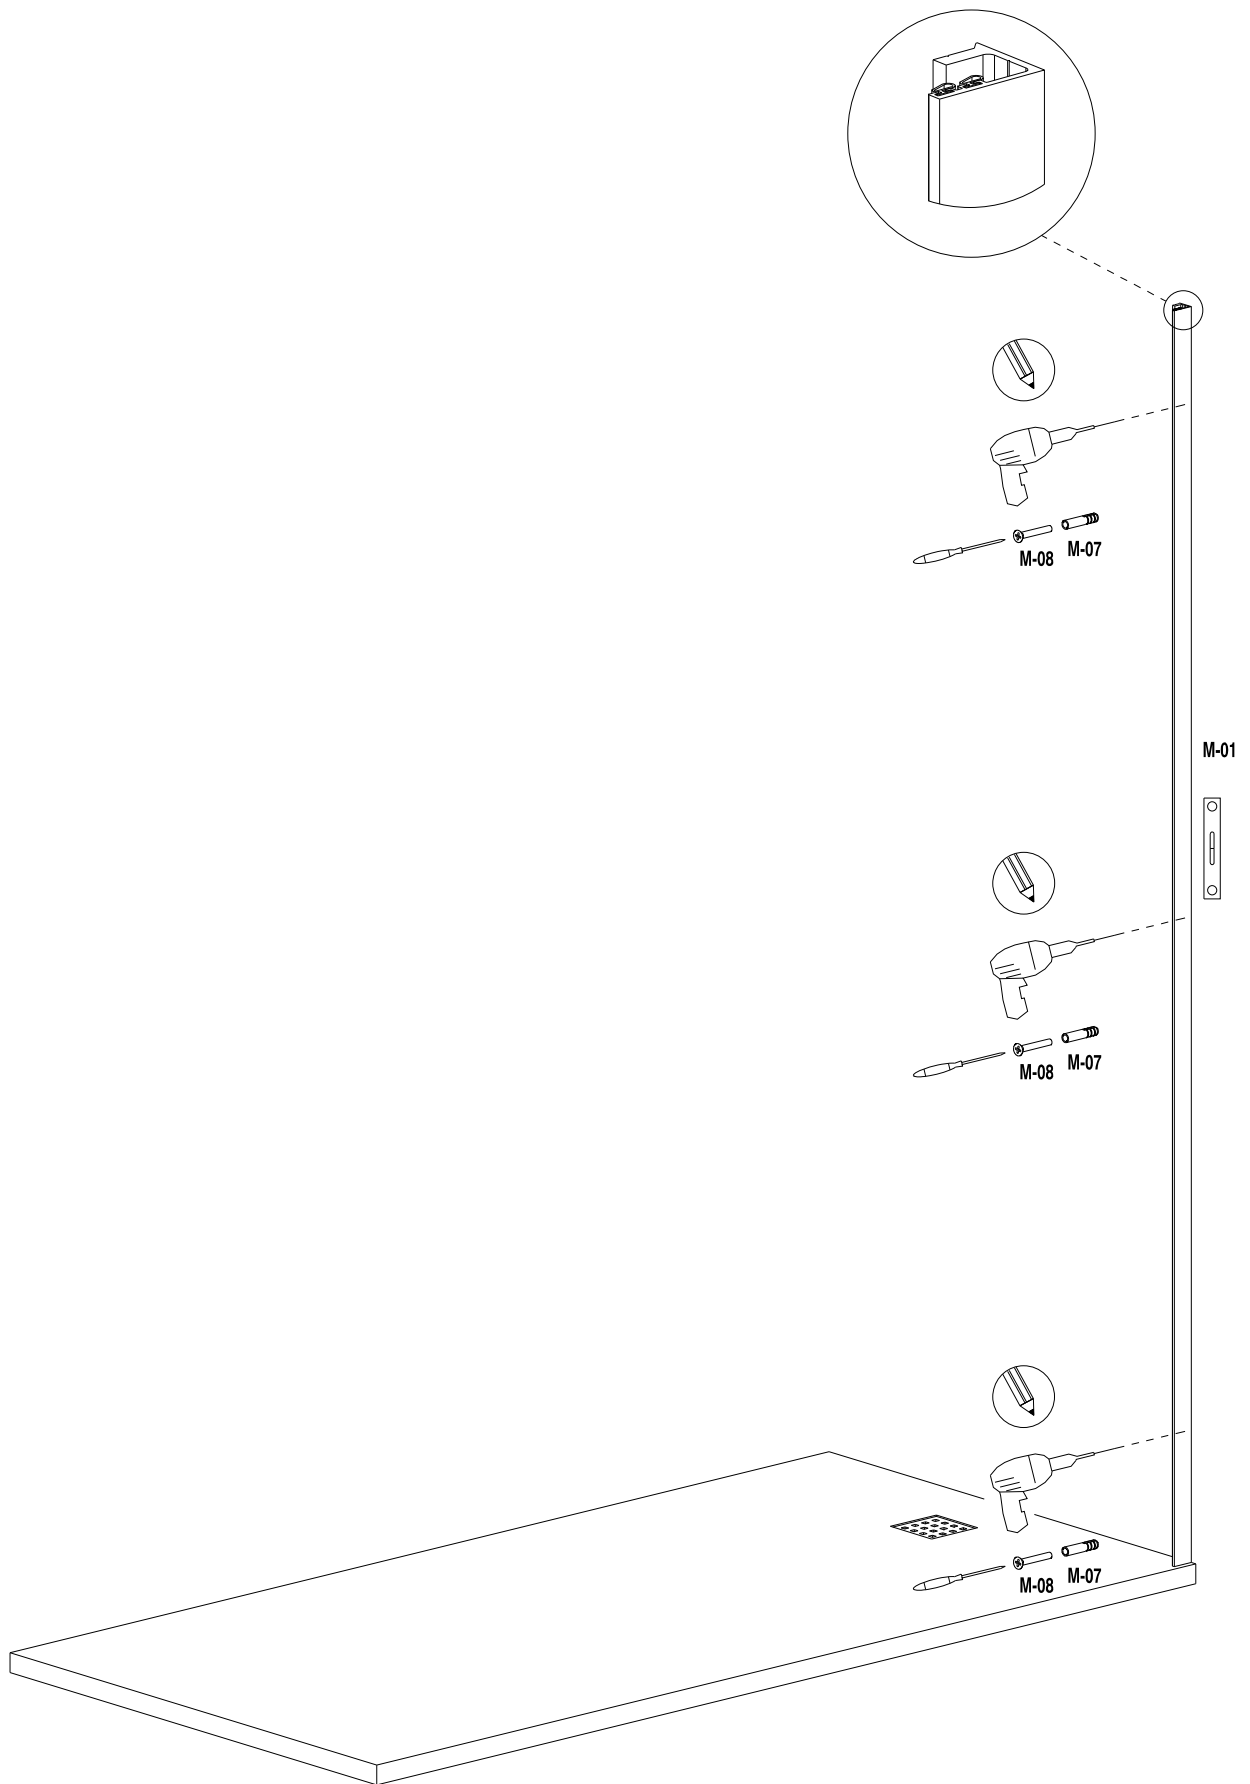


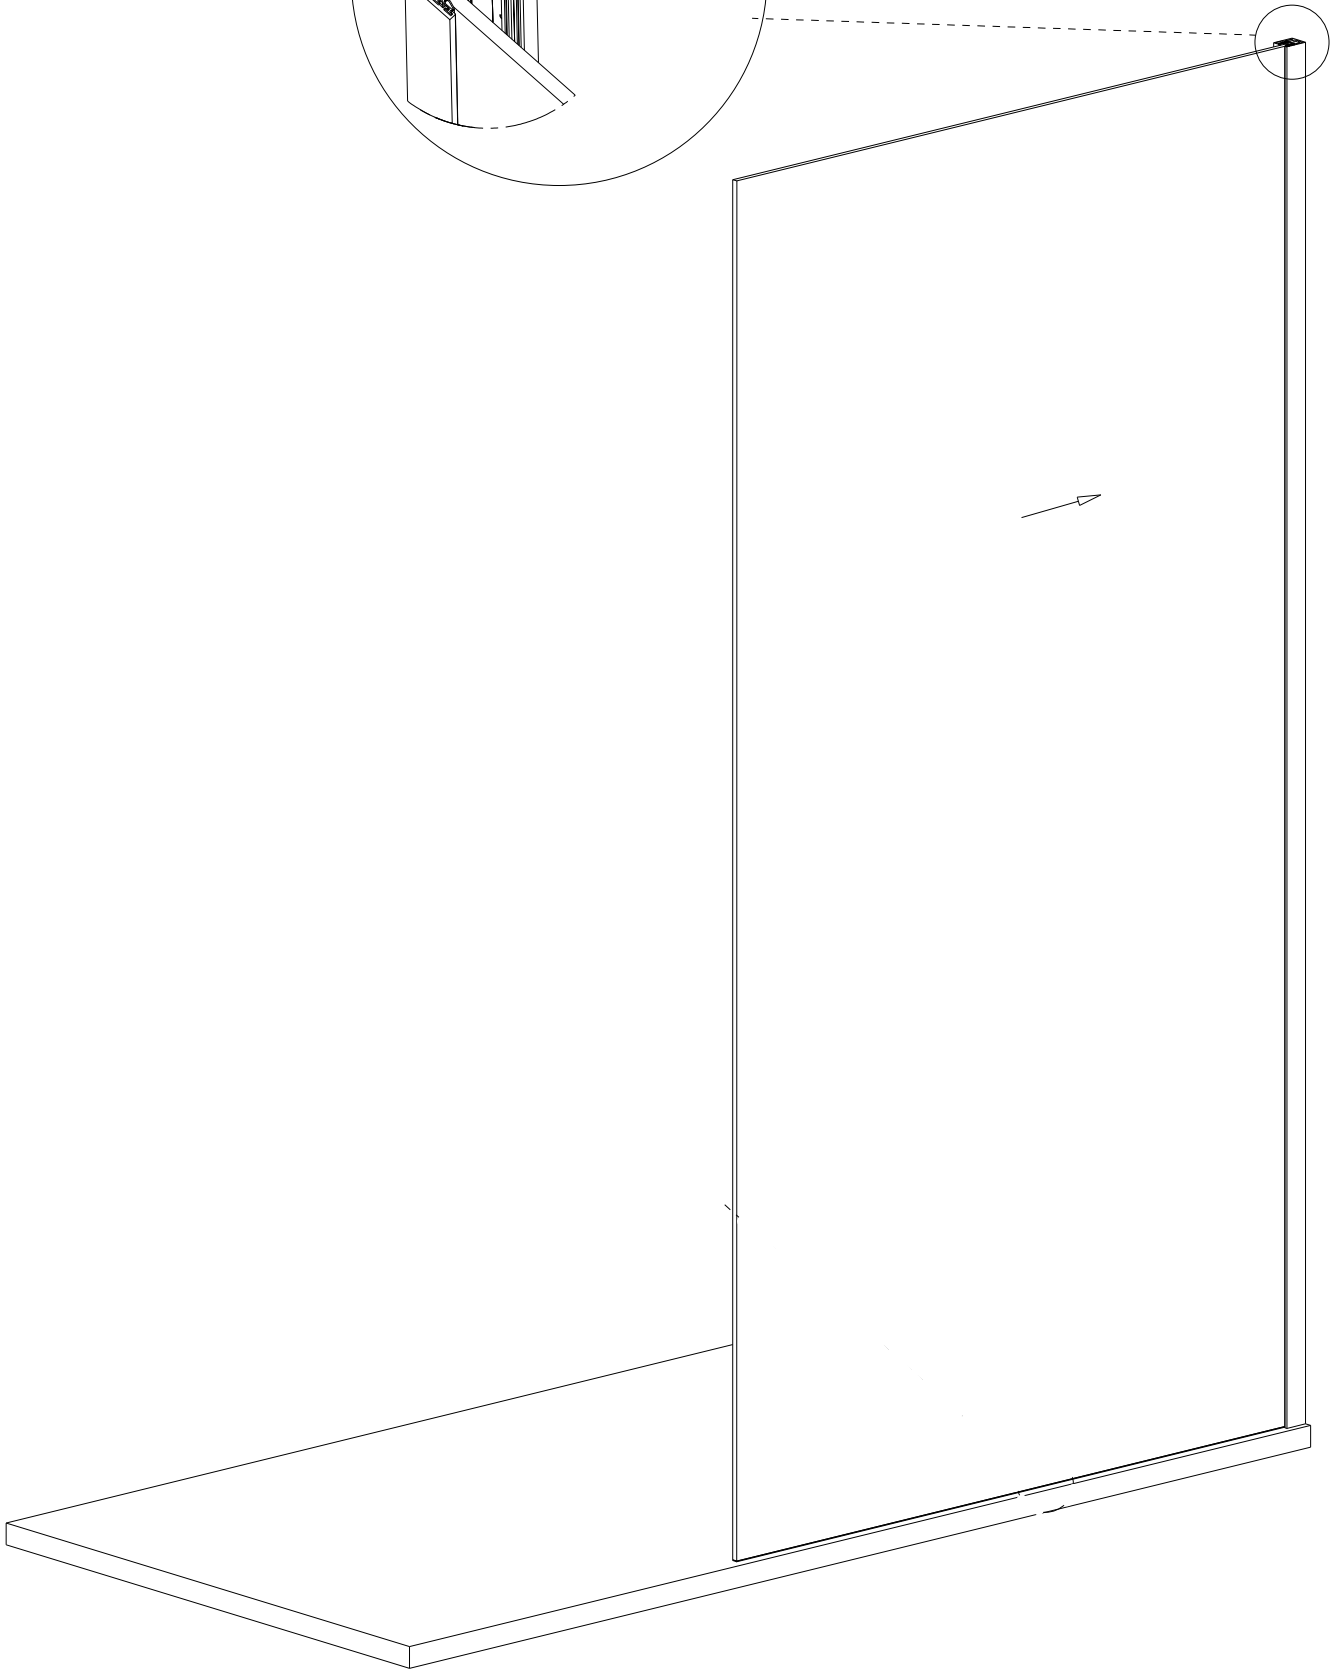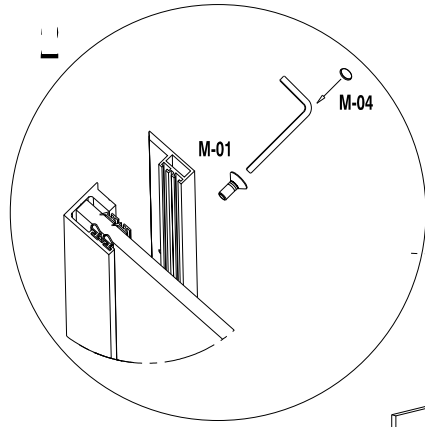

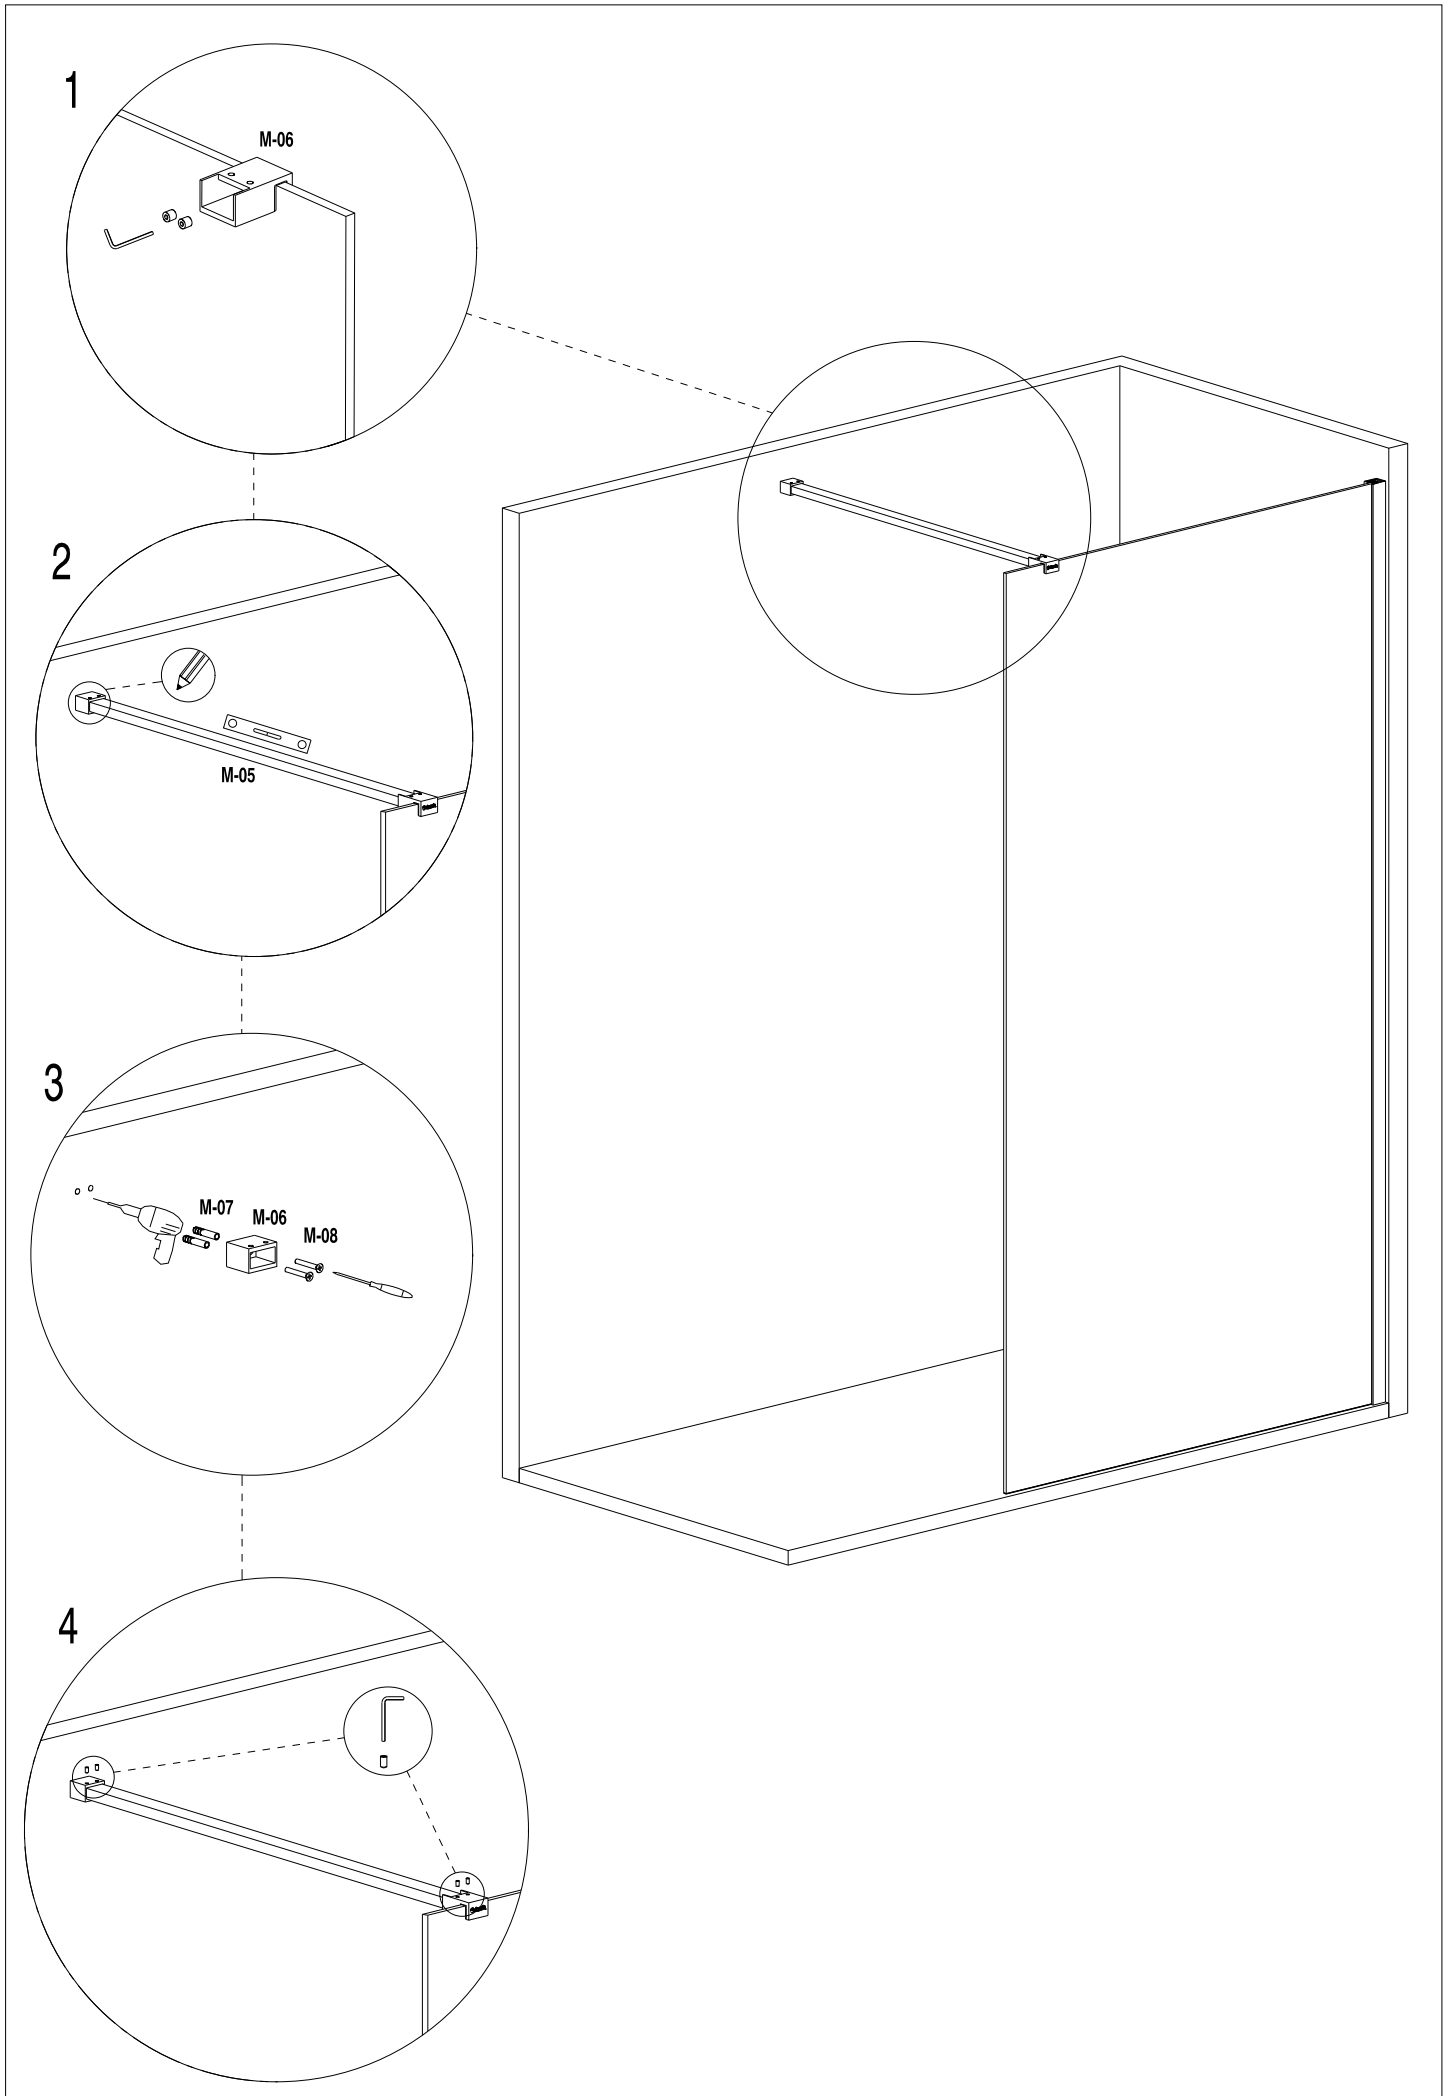


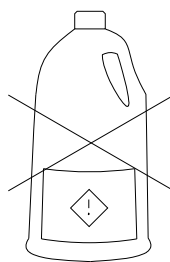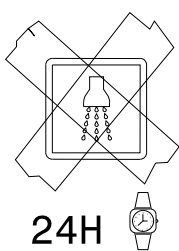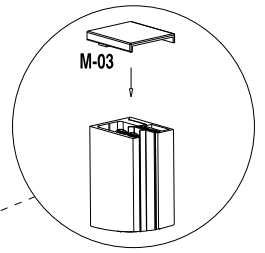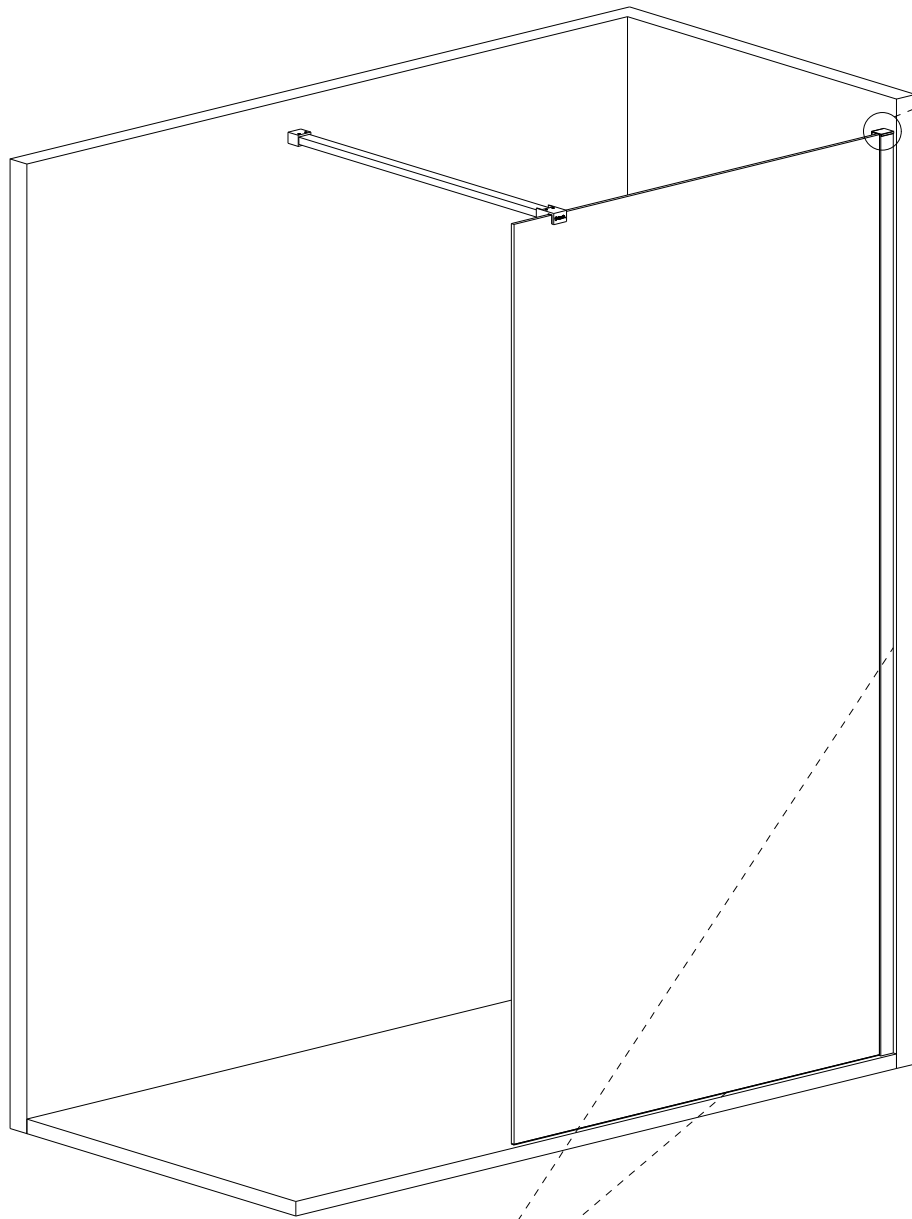

X



✓

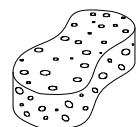



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com




13


UNE-EN 14428





// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

FURO P23 Side 2

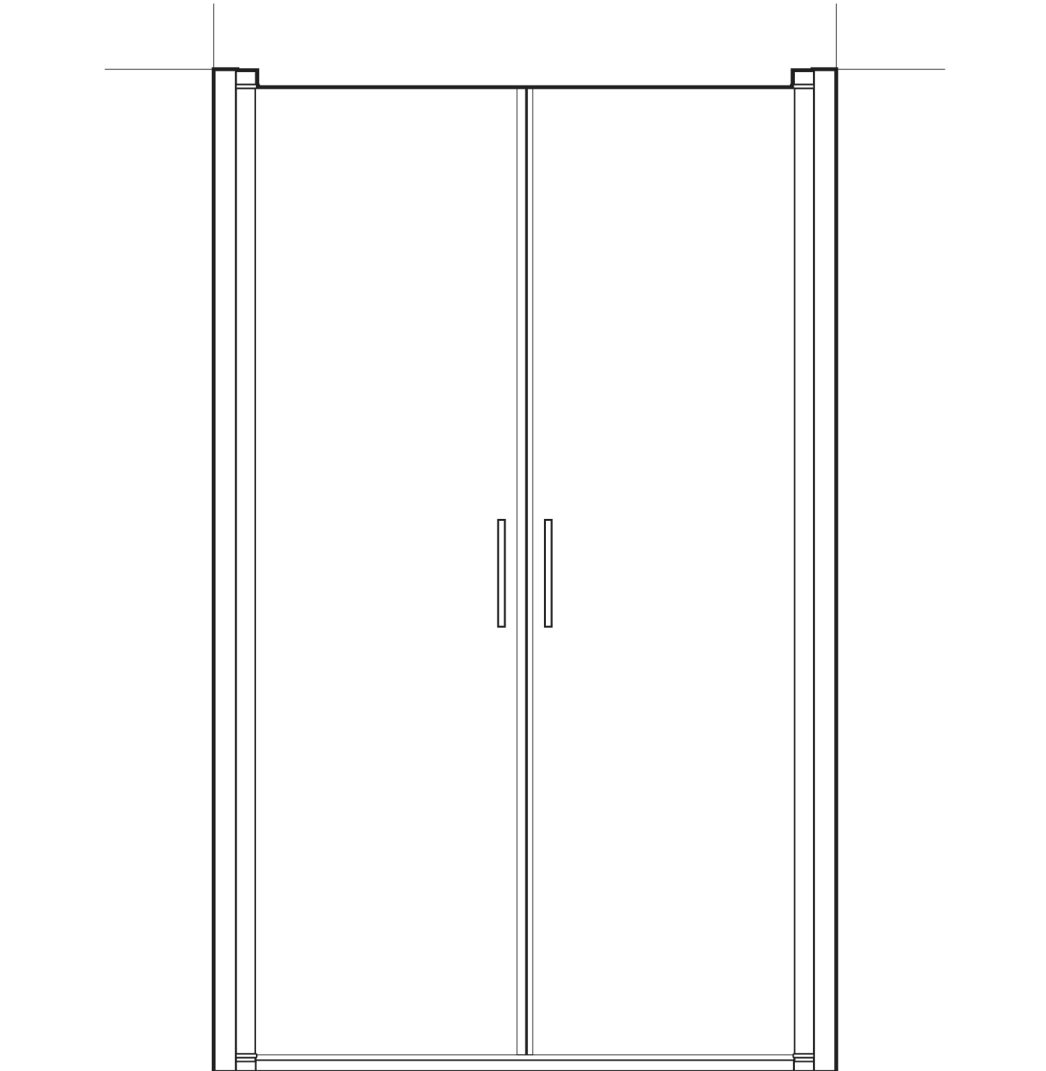

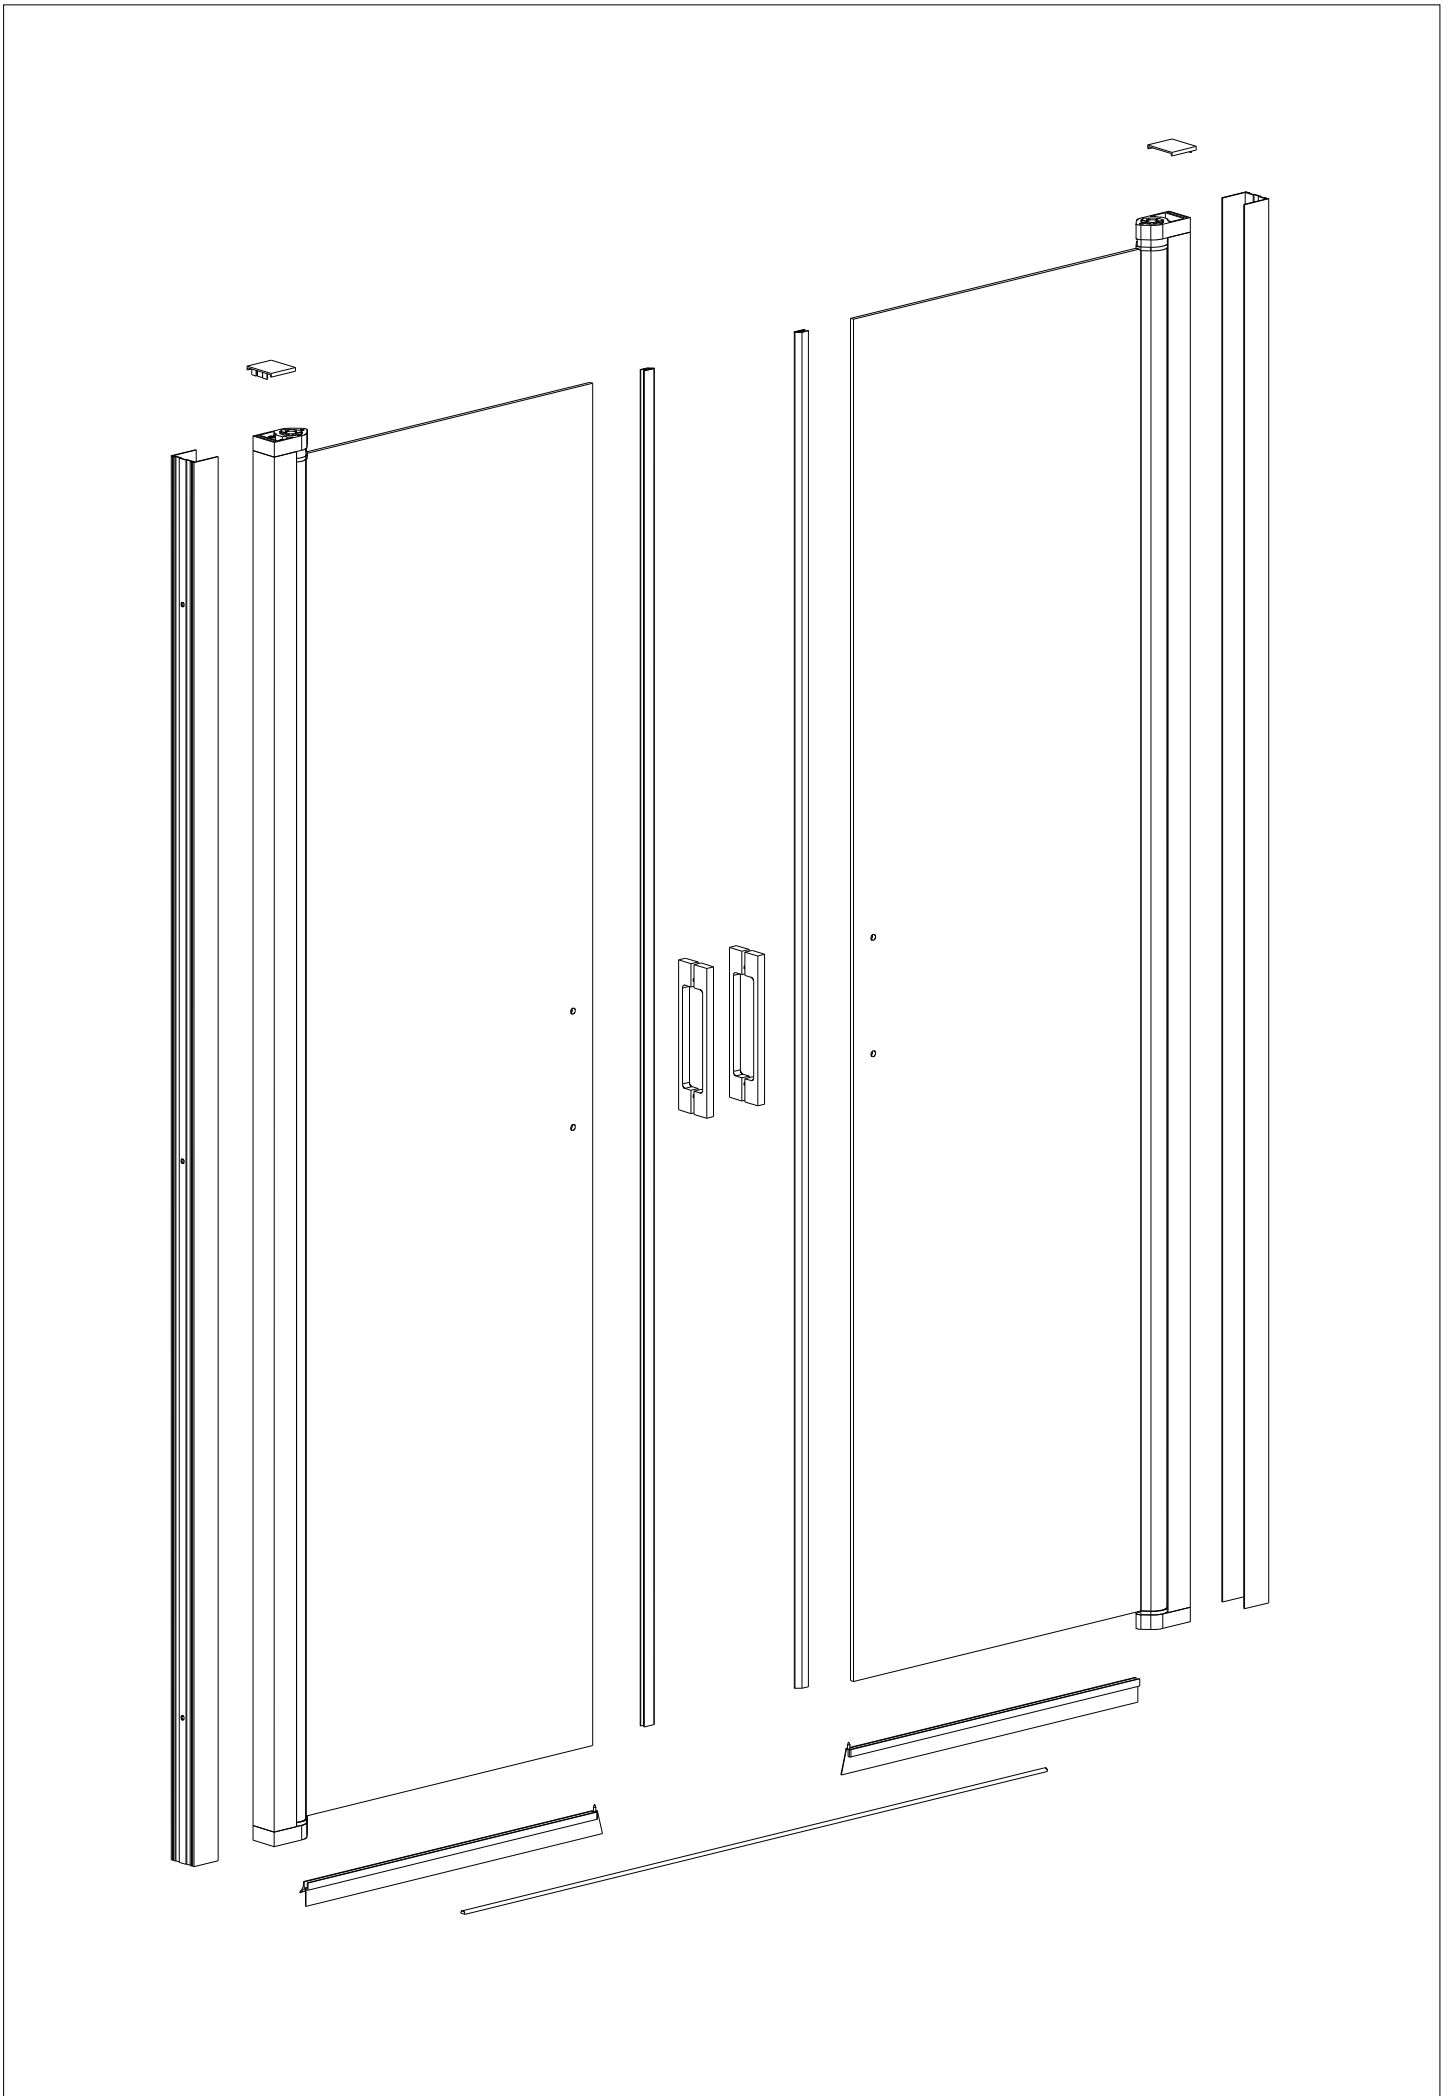


M-01  **2**


M-03  **2**


M-05  **1**


M-07  **2**


M-09  $\varnothing 6$ **6**

M-11  **3,5x16** **6**


M-02  **2**

M-04  **1**



M-06  **2**


M-08  **6**


M-10  **DIN 7981 4,2x32** **6**







1

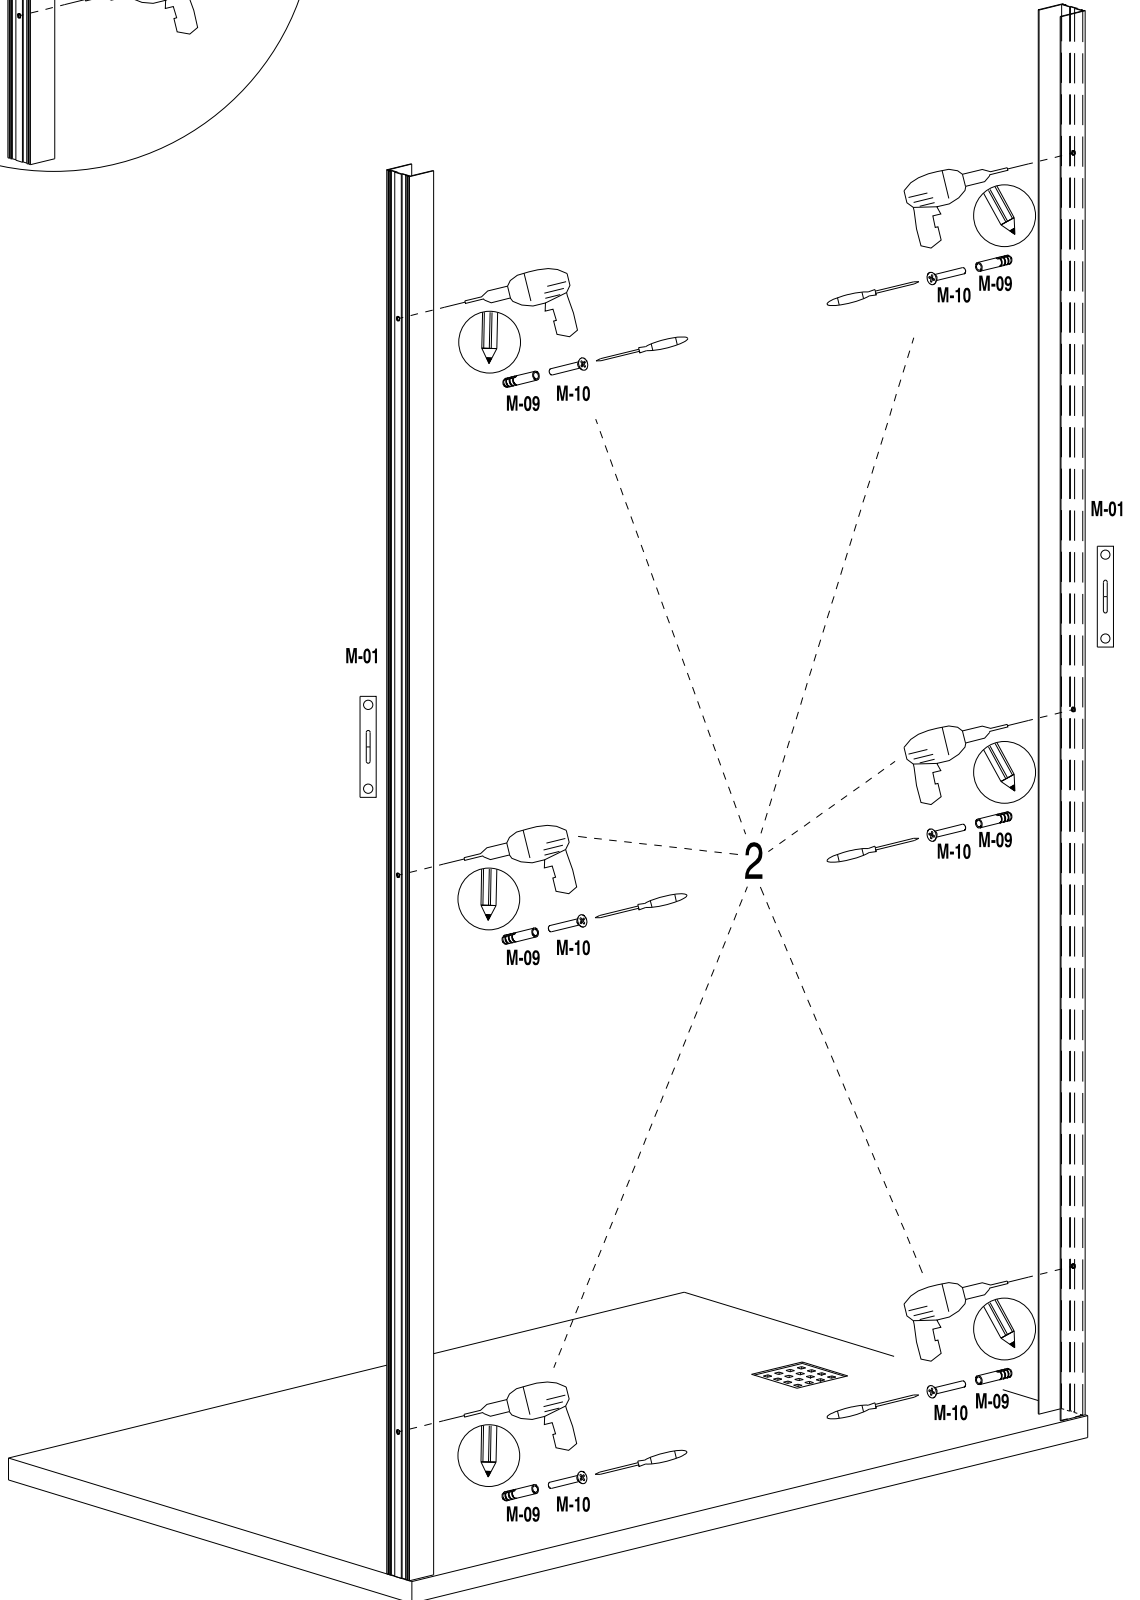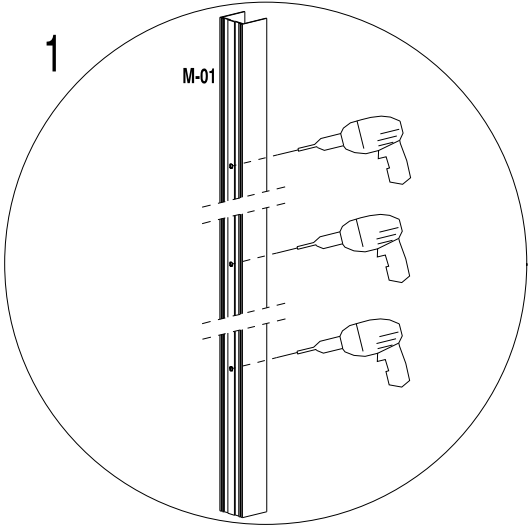

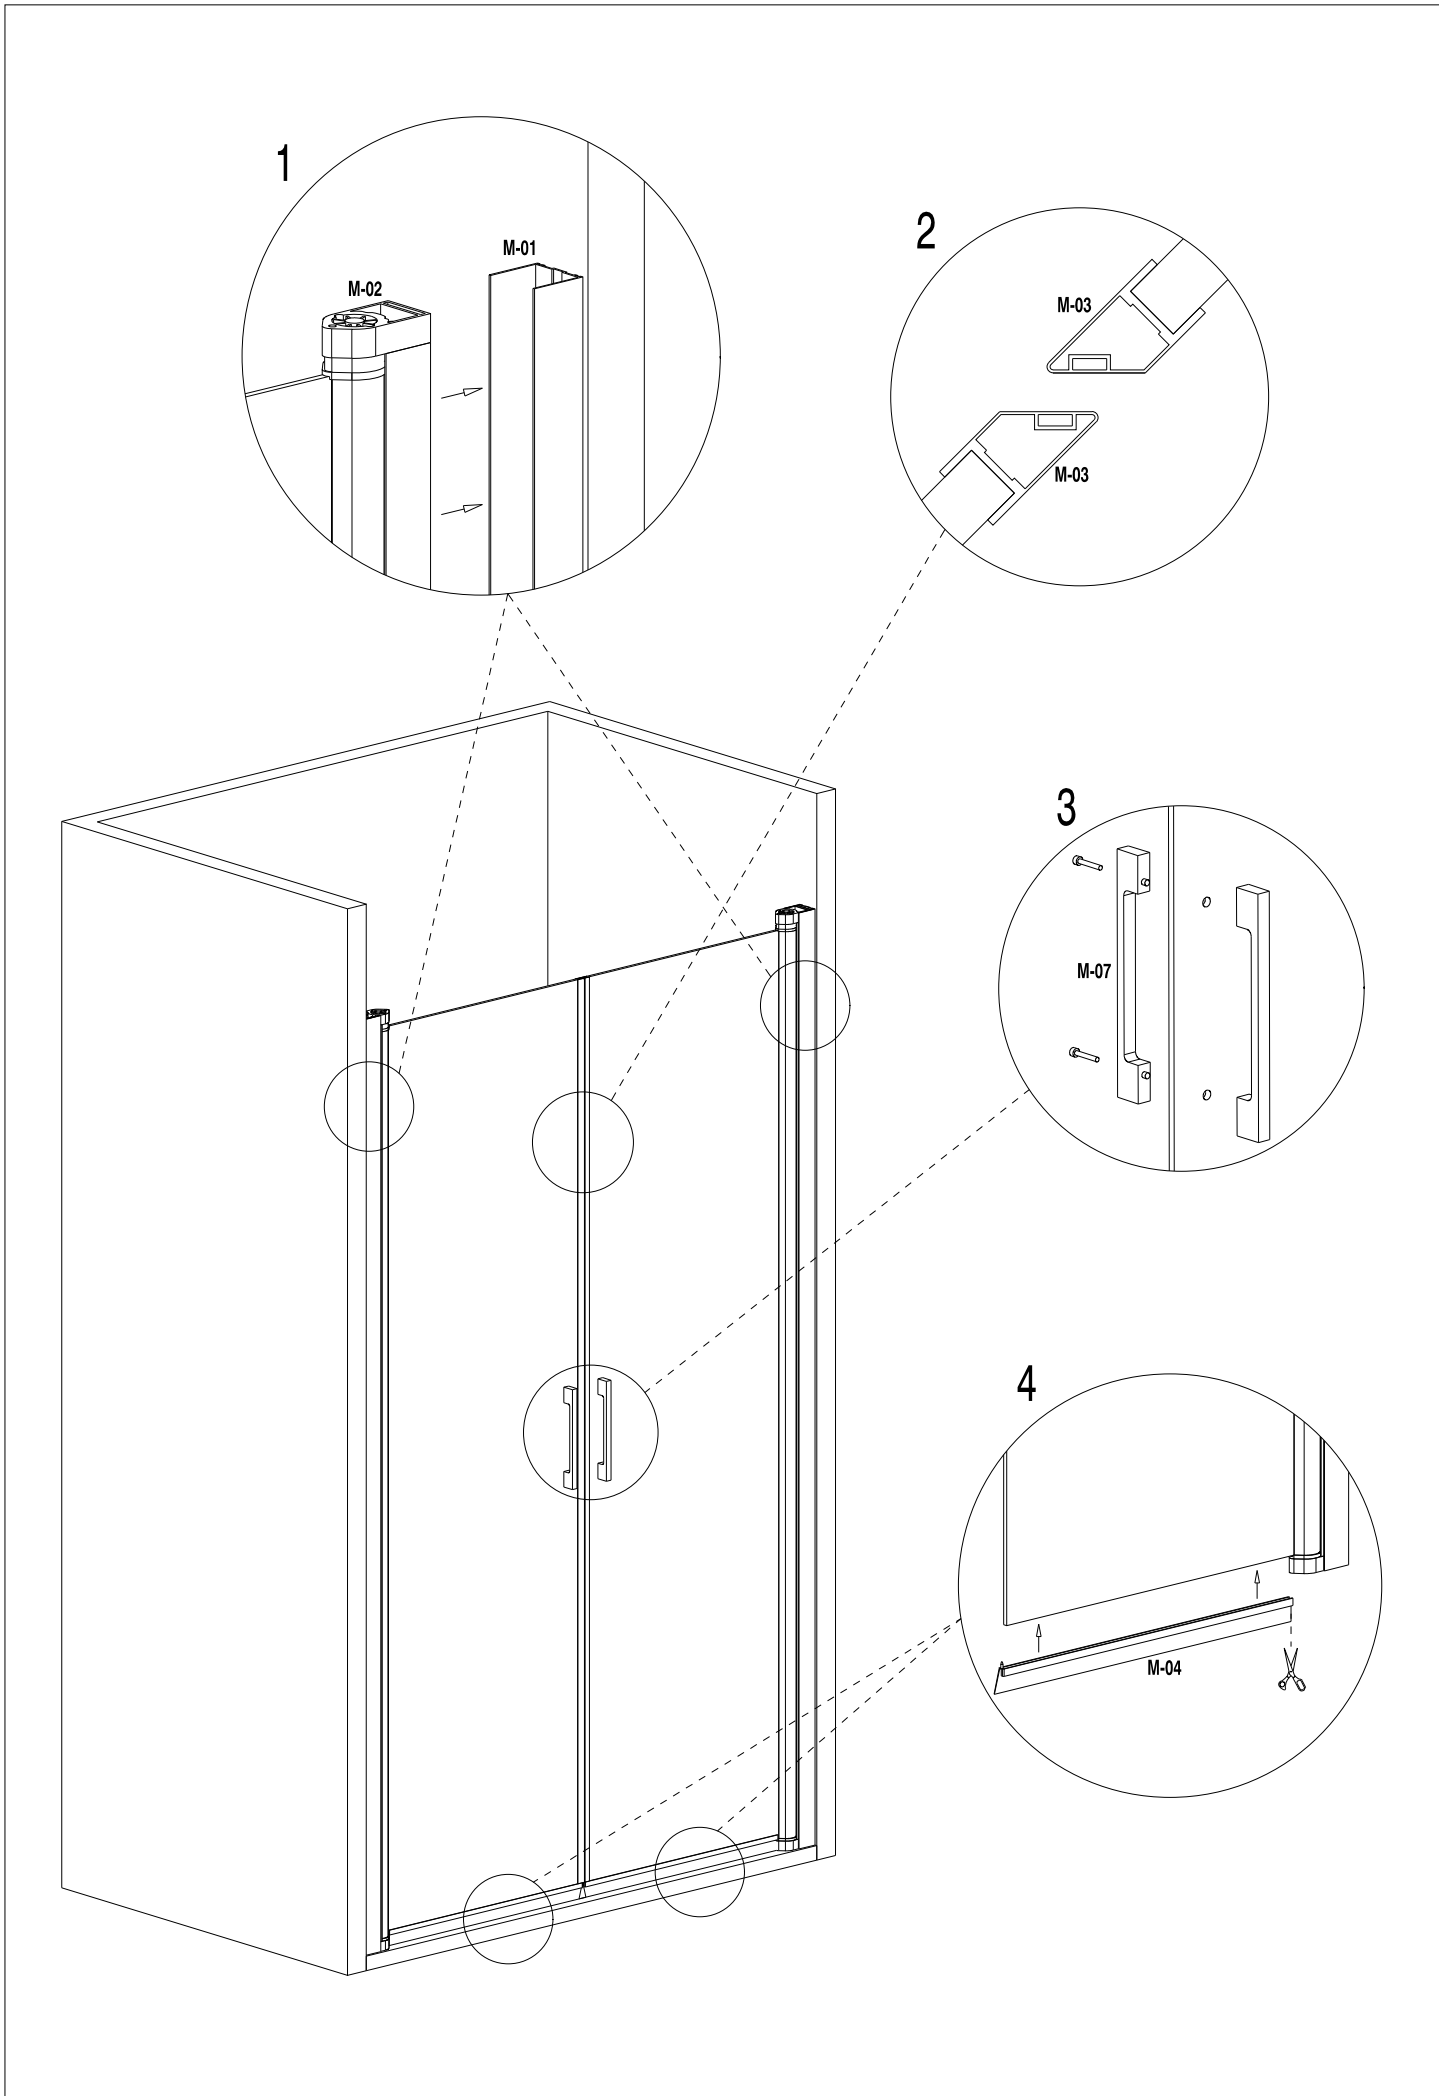

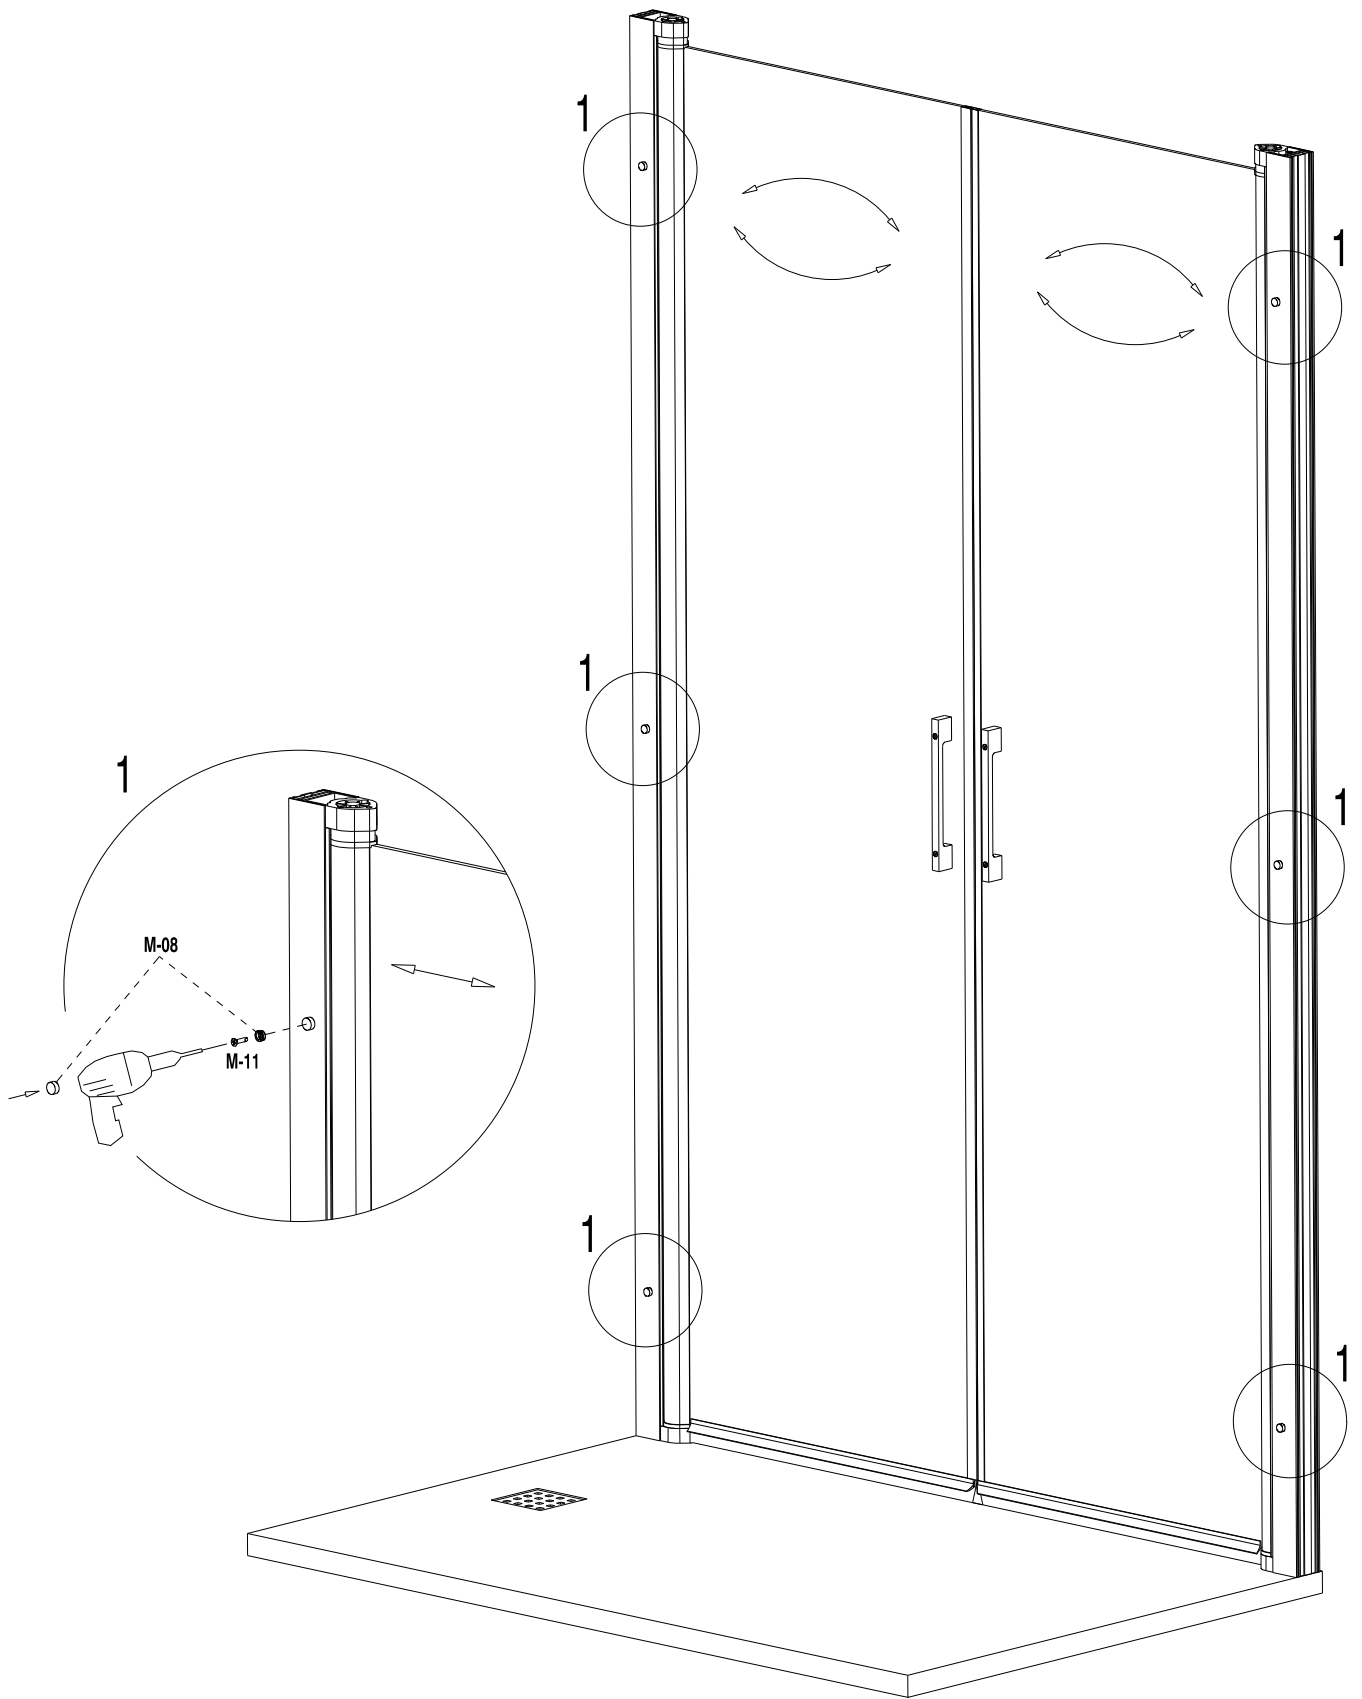

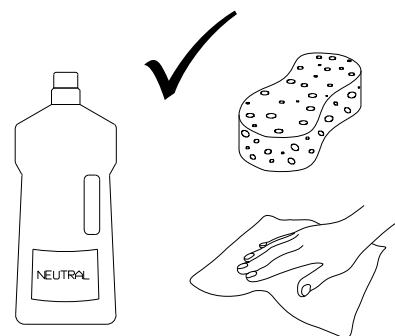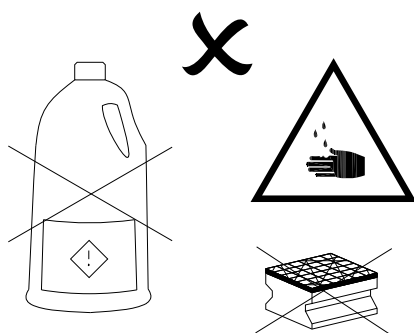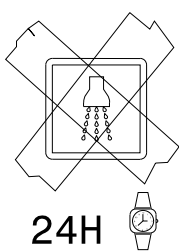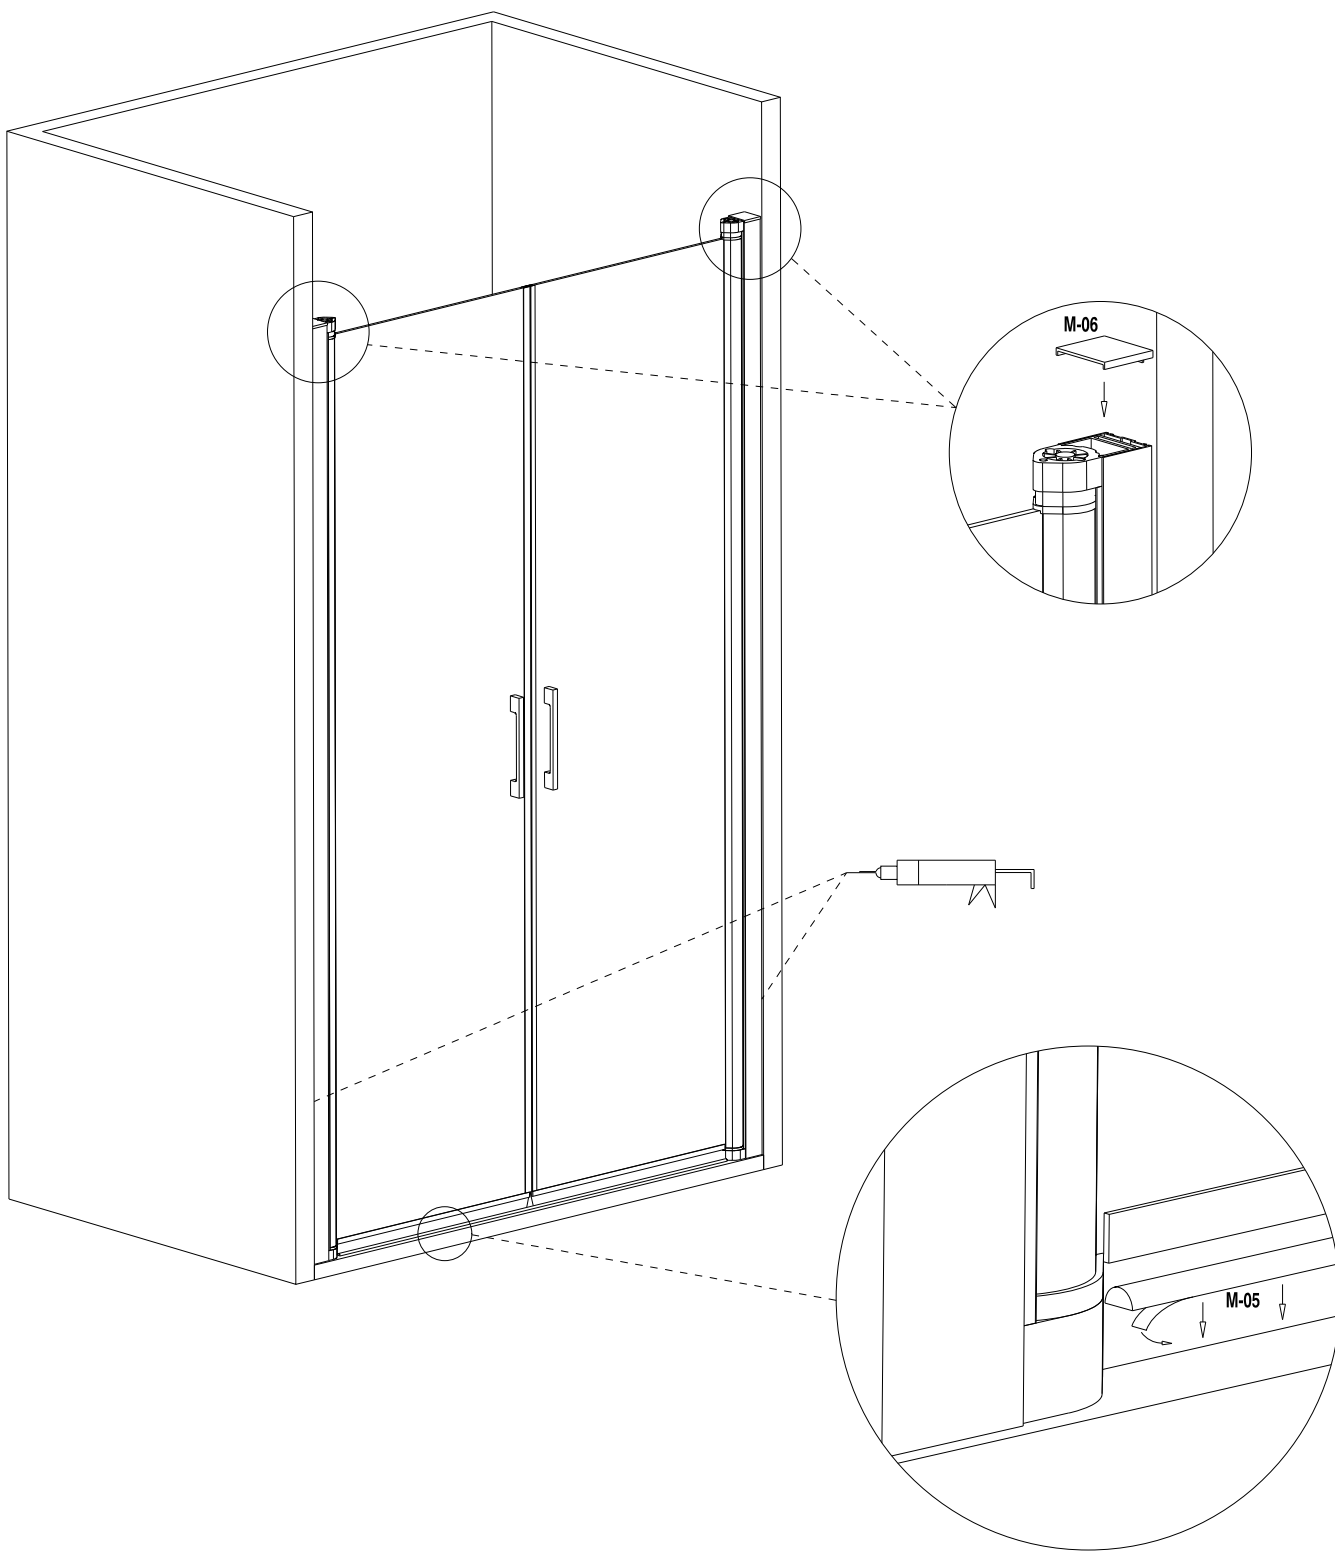



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

